ROYAL MODEL
DIORAMA ACCESSORIES

ITEM NO. 419

MICRODETAILS SET
1/35 Scale


Sd.Kfz. 165 HUMMEL (part 3°)

The parts included in this kit are to be assembled in conjunction with the Dragon kit No.6150. For best results in the assembling of photo-etched and resin parts use cyanoacrylate glue. Always remember to use cyanoacrylate glue in a well ventilated area. Before assembling be sure to remove all the parts to be substituted with photo-etched parts. It is advisable before assembling to study well the instructions which accompany this kit plus any other sufficient documentation. It is advise to heat the metal parts before glueing, once the metal is hot it will be easier to bend.

REMOVE OR SUBSTITUTE THE PLASTIC KIT PART WITH ROYAL MODEL PART — REPEAT SAME OPERATION FOR THE OTHER SIDE — THIS PART SUBSTITUTE THE PLASTIC PART N.. — PK PLASTIC KIT PART — ADD NUT — ADD ROD


If ulterior details are required for your model it is possible to use added set ROYAL MODEL no. 411-412.


For to make the nuts of parts no. 2B,3B to press into the references points with a puch as shown below.

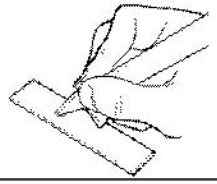


1


2

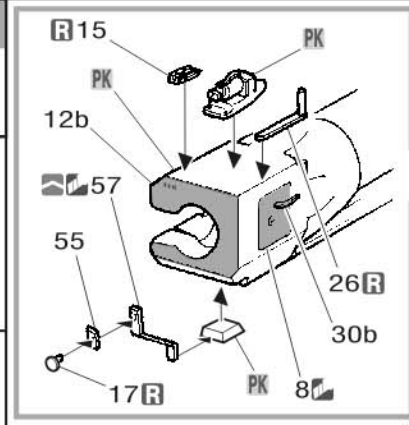

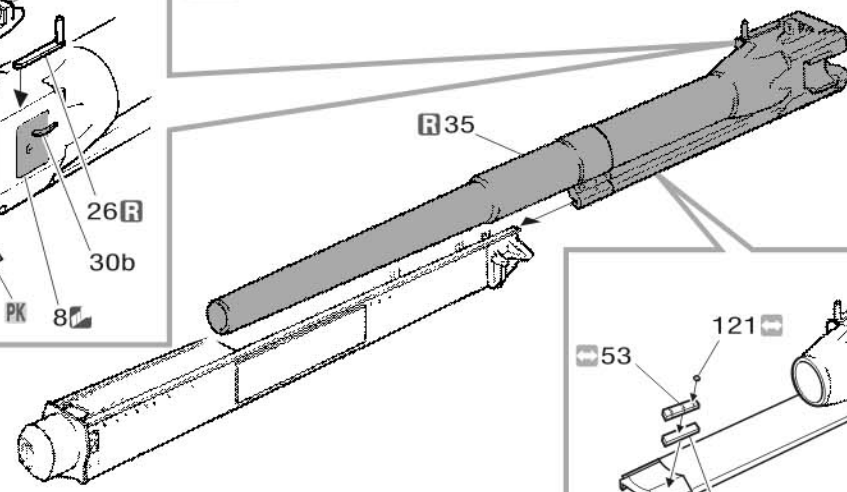


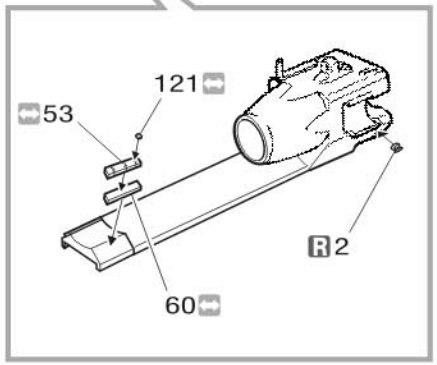


3

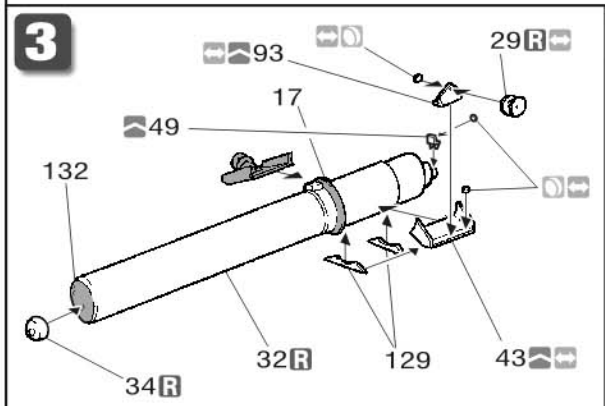


4

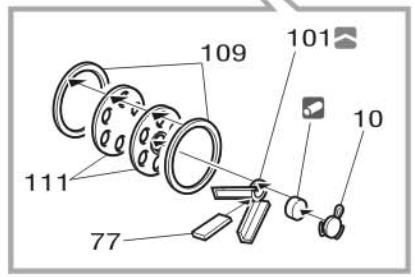


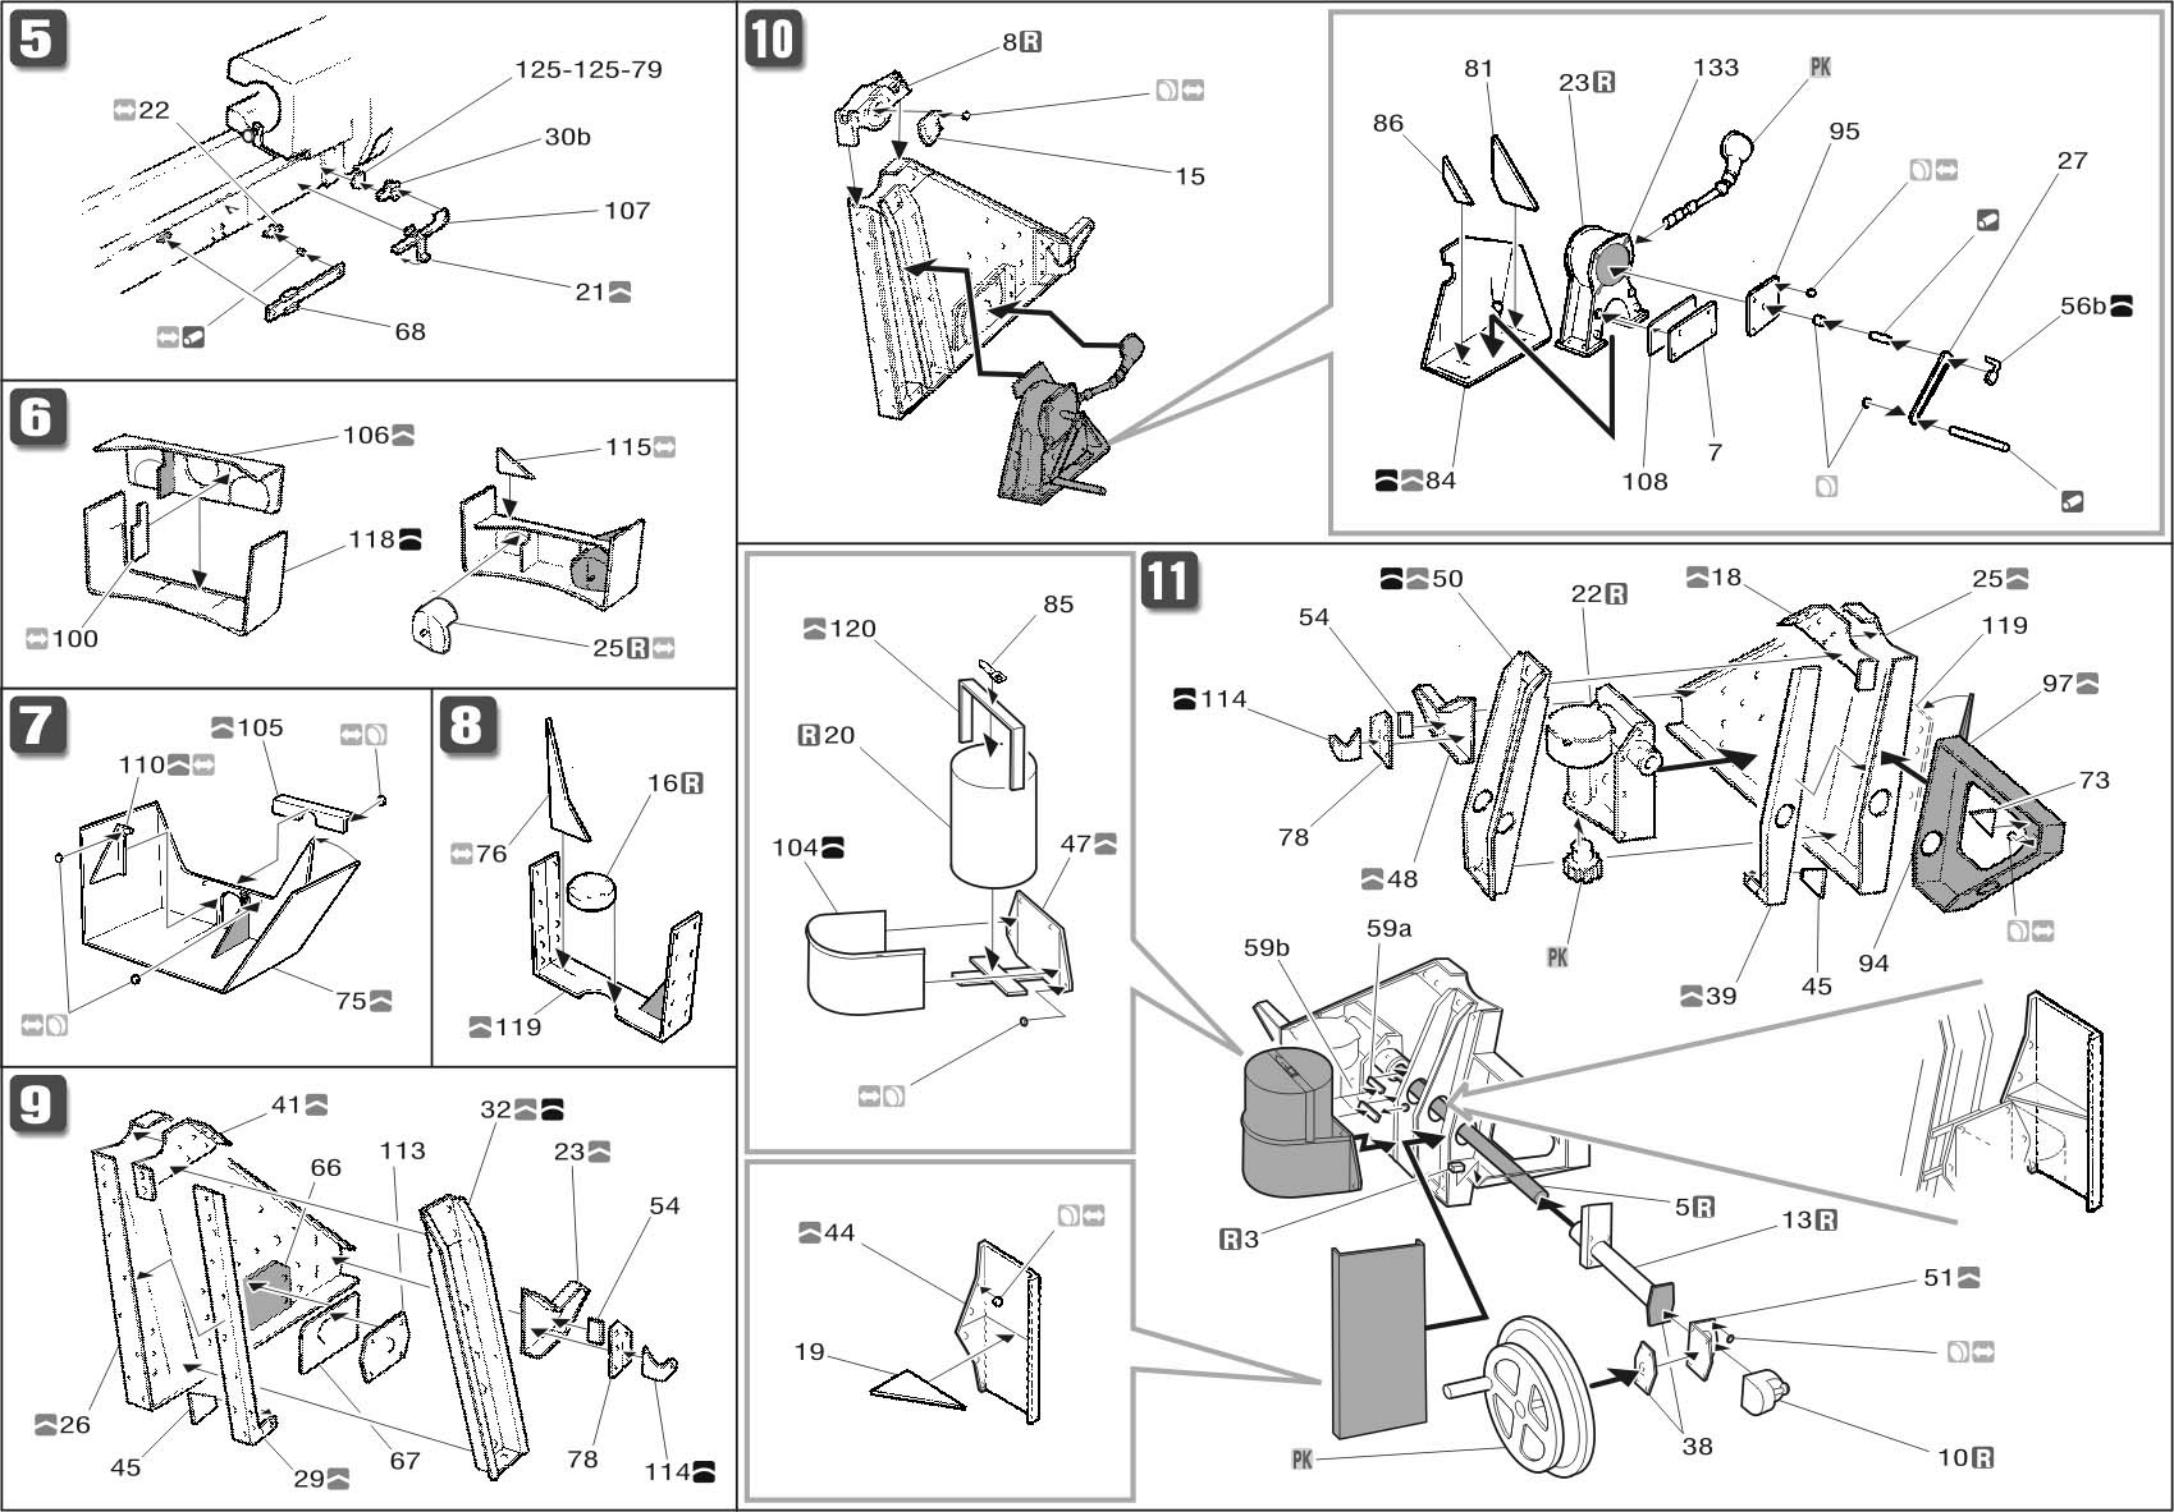
5
22
125-125-79
30b
107
21
68
6
106
115
118
100
25R
7
105
110
75
8
16R
76
119
9
41
32
66
113
23
54
26
45
29
67
78
114
10
8R
15
81
23R
133
PK
86
95
27
56b
84
108
7
11
50
22R
18
25
54
119
114
97
73
78
48
PK
39
45
94
59b
59a
120
85
R20
104
47
44
19
5R
13R
R3
51
38
10R


12

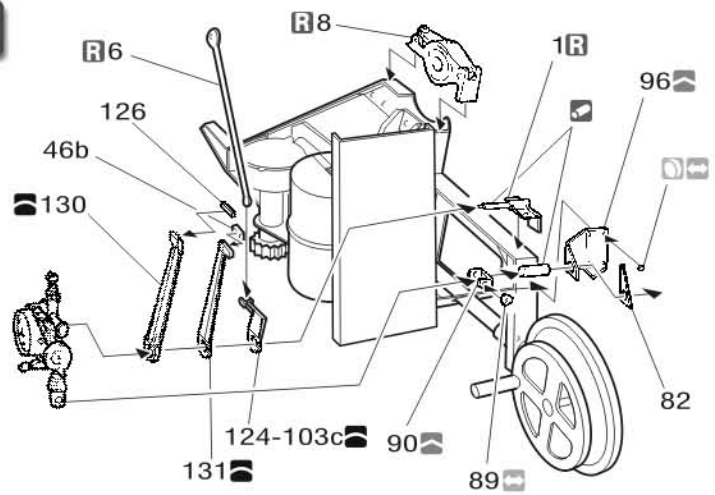


13

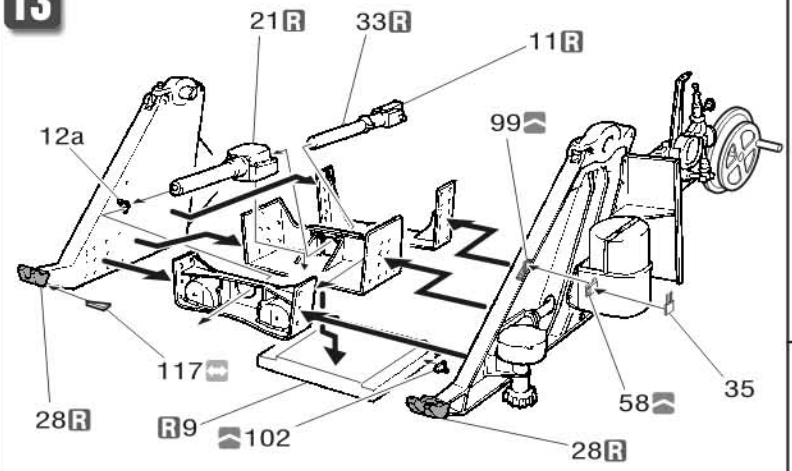


14

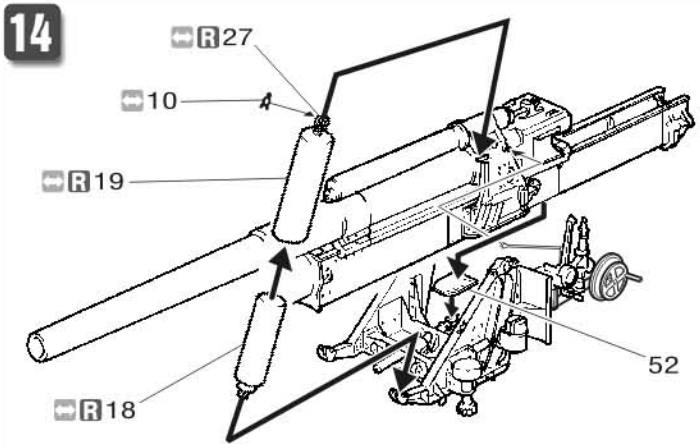

15

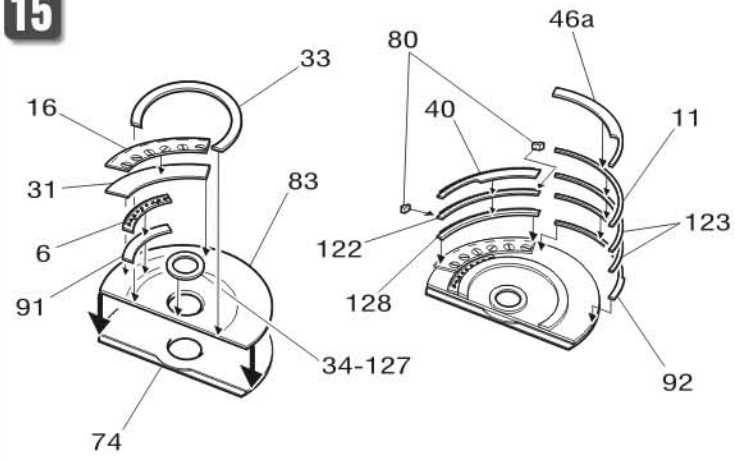


16

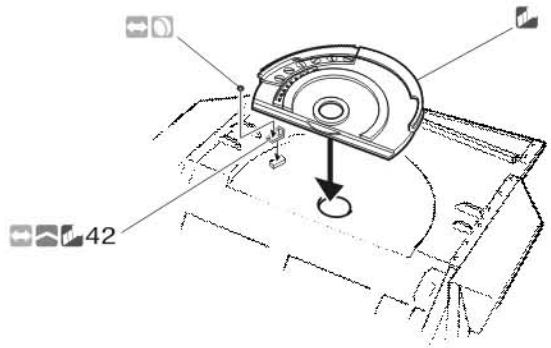


17

In alternative of the plastic parts you can use the details of **Royal Model** item **412**

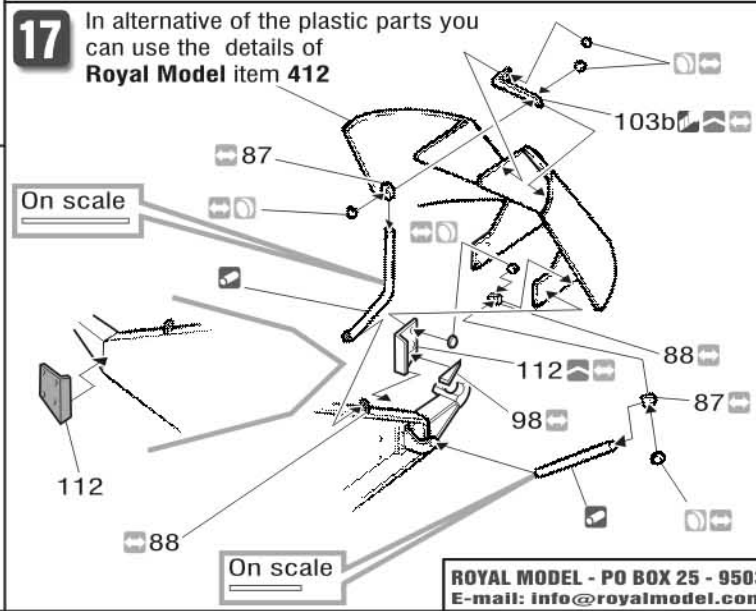


18

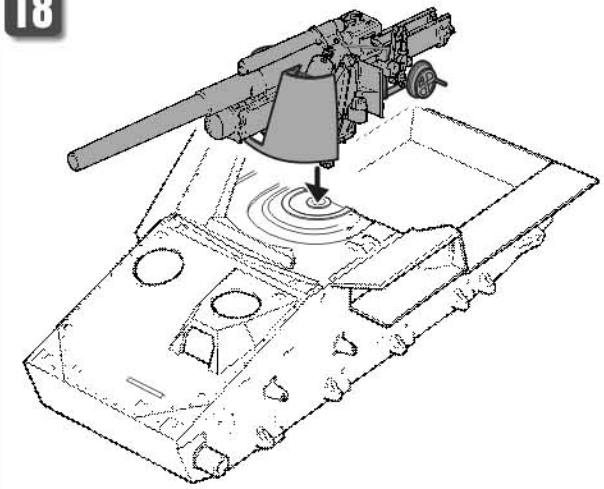


Others set available for this kit.

ITEM 411-Sd. Kfz. 165 Hummel (Part 1°)

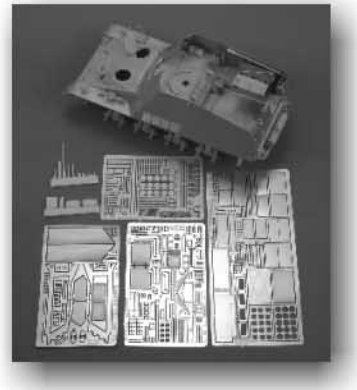

ITEM 412-Sd. Kfz. 165 Hummel (Part 2°)

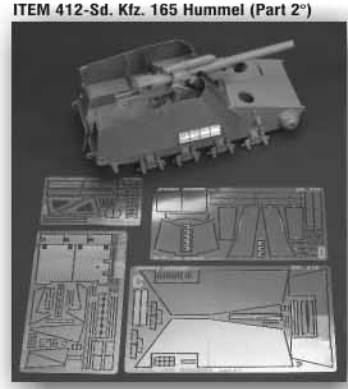

ROYAL MODEL - PO BOX 25 - 95039 TRECASTAGNI (CT) ITALY Tel. +39 95 780 0707-Fax +39 95 780 99 11
E-mail: info@royalmodel.com - Internet: www.royalmodel.com
©(2006) ROYAL MODEL