ROYAL MODEL
DIORAMA ACCESSORIES

ITEM NO. 421

MICRODETAILS SET
1/35 Scale

M-7 "PRIEST" (part 3)


The parts included in this kit are to be assembled in conjunction with the I kit Italeri No.206. For best results in the assembling of photo-etched and resin parts use cyanoacrylate glue. Always remember to use cyanoacrylate glue in a well ventilated area. Before assembling be sure to remove all the parts to be substituted with photo-etched parts. It is advisable before assembling to study well the instructions which accompany this kit plus any other sufficient documentation.

This set must be assembled in conjunction with the set no. 418.


For a best result of your model it is possible to use added set ROYAL MODEL no. 420.

BE CAREFUL
REPEAT SAME OPERATION FOR THE OTHER SIDE
THIS PART SUBSTITUTE THE PLASTIC PART N...
FACULTATIVE
TO BEND
RESIN PART
REMOVE OR SUBSTITUTE THE PLASTIC KIT PART WITH ROYAL MODEL PART
TO BE HEATED
W WIRE
ADD PLASTICARD STRUCTURE
PK PLASTIC KIT PART


1

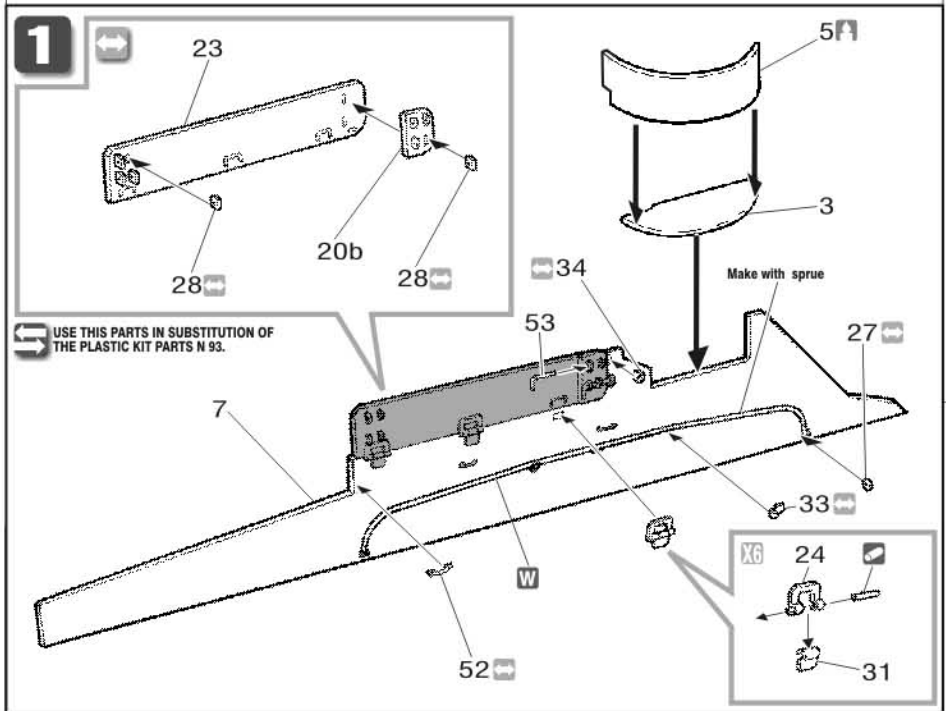


2

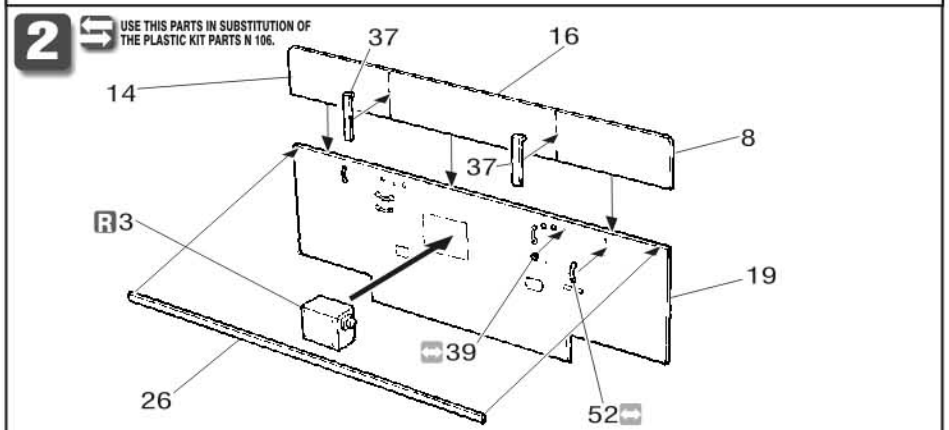


3

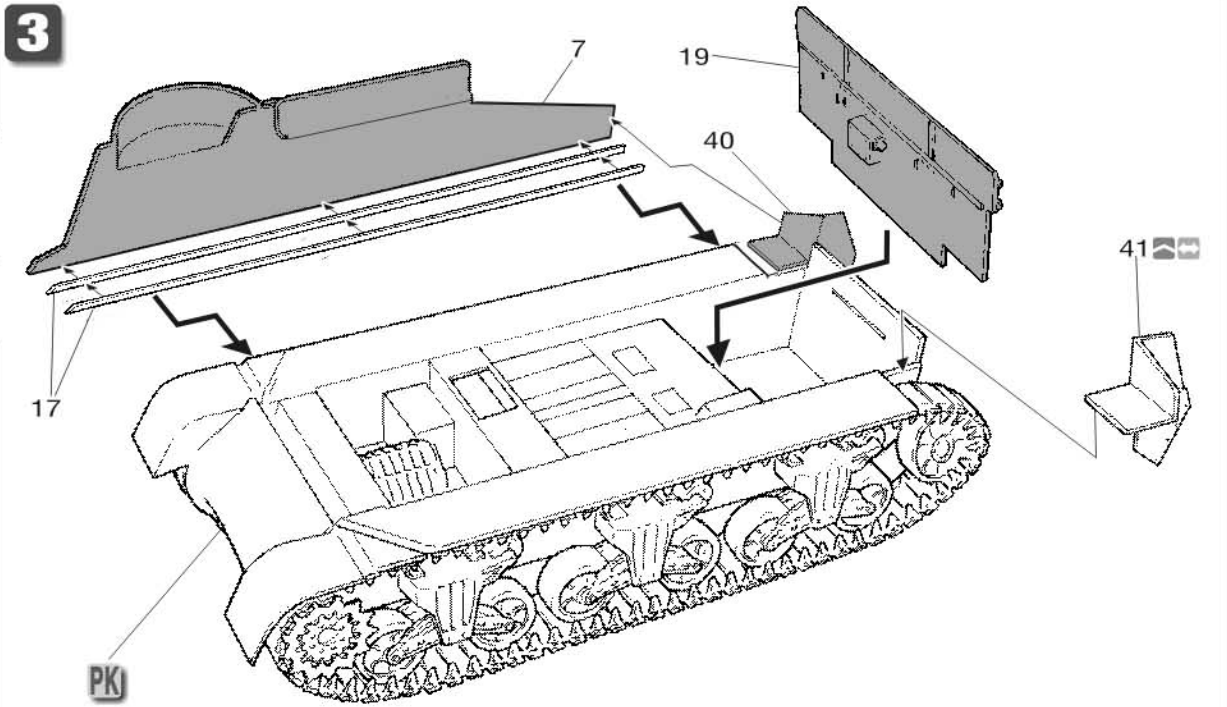

4

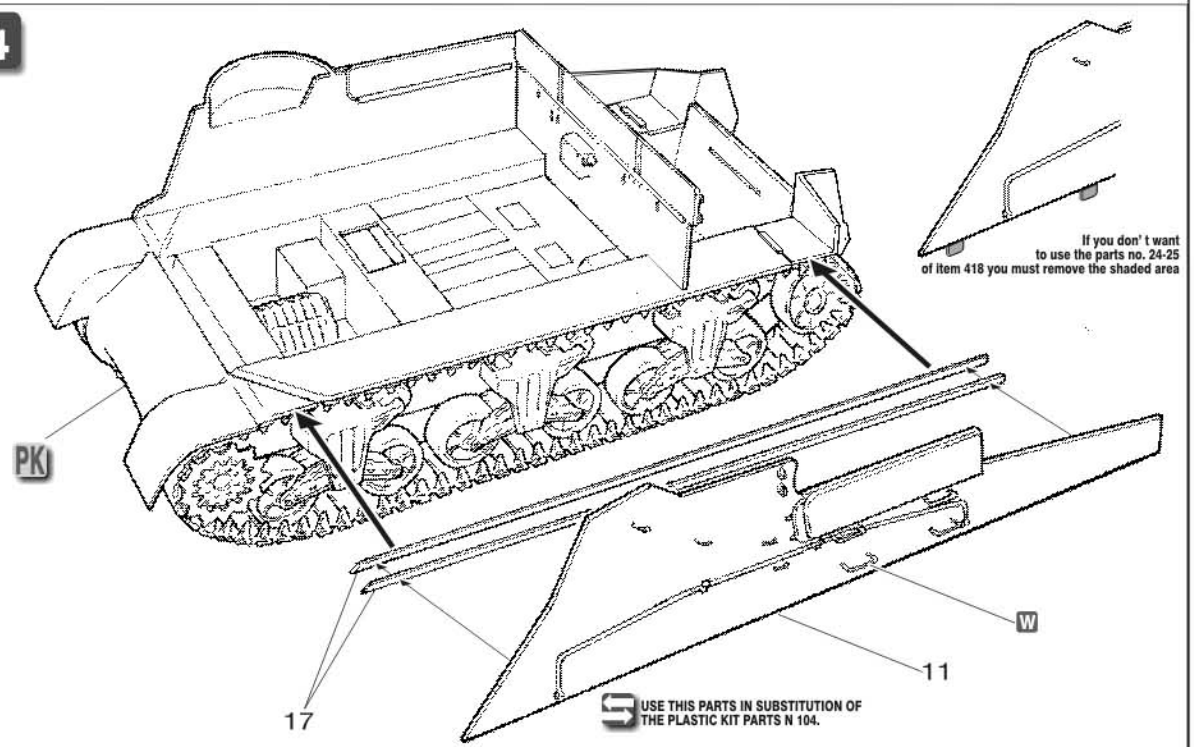

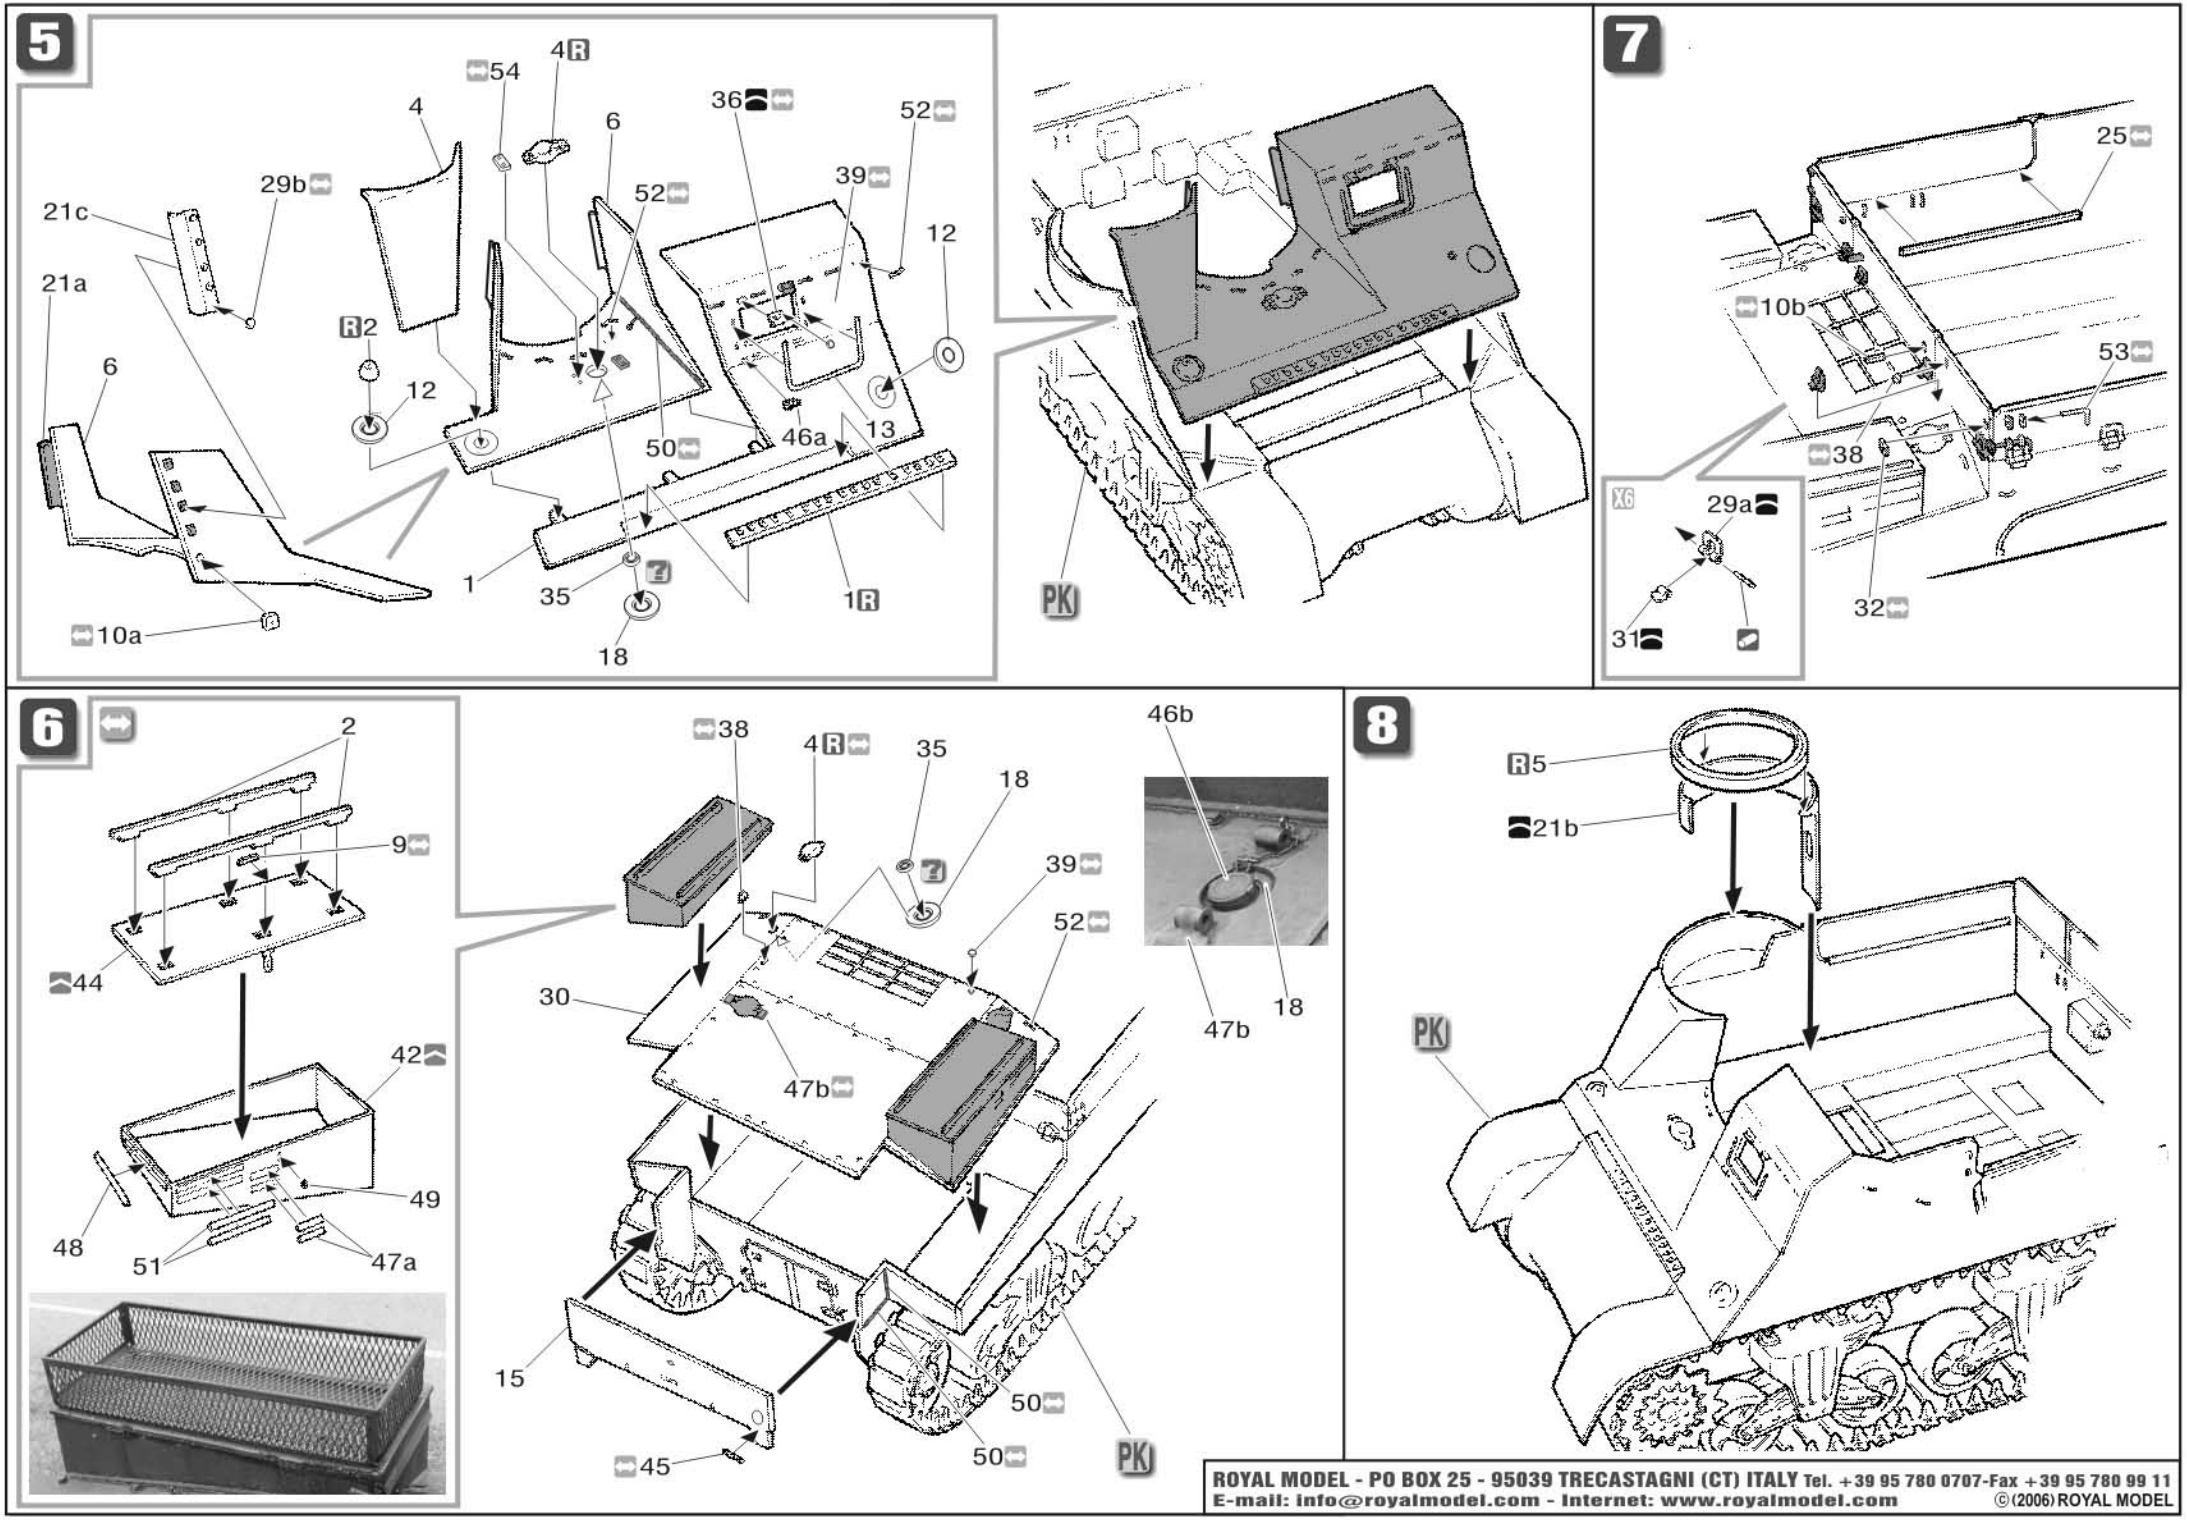

ROYAL MODEL - PO BOX 25 - 95039 TRECASTAGNI (CT) ITALY Tel. +39 95 780 0707-Fax +39 95 780 99 11
E-mail: info@royalmodel.com - Internet: www.royalmodel.com
©(2006) ROYAL MODEL