ROYAL MODEL
DIORAMA ACCESSORIES


18 t (Sd. Kfz. 9) "FAMO"

MICRODETAILS SET
No. 236
1/35 Scale


The parts included in this kit are to be assembled in conjunction with the **TAMIYA** kit **No. 239**. For best results in the assembling of photo-etched and resin parts use cyanoacrylate glue. Always remember to use cyanoacrylate glue in a well ventilated area. Before assembly be sure to remove all parts to be substituted with photo-etched and resin parts. It is advised before assembly to study well the instructions which accompany this **MICRODETAILS SE**T plus any other sufficient documentation. Note that some particulars illustrated in the instructions have been enlarged for easy identification. Also note that some photo-etched details will be easier to work with if heated with flame before mounting.

○ Substitute the plastic part with the photo-etched or resin part	(00) Photo-etched part	◆ Facoltative	00 Film sheet	WIRE (A) 0,90 mm
● Repeat same operation for the other side	R Resin part	00 Plastik kit part	✹ To be heated	


1 Details assembly.

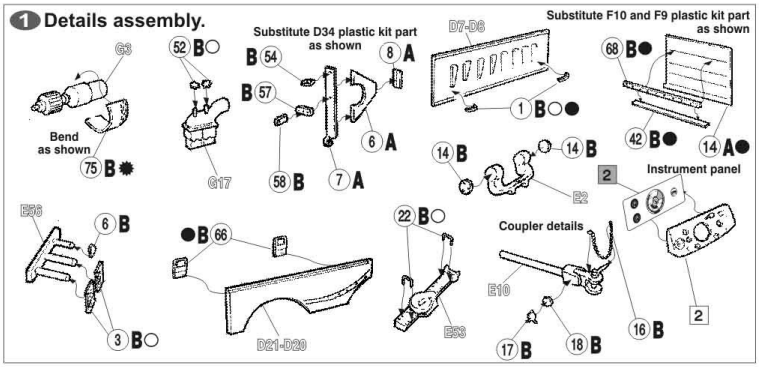


2 Details assembly.

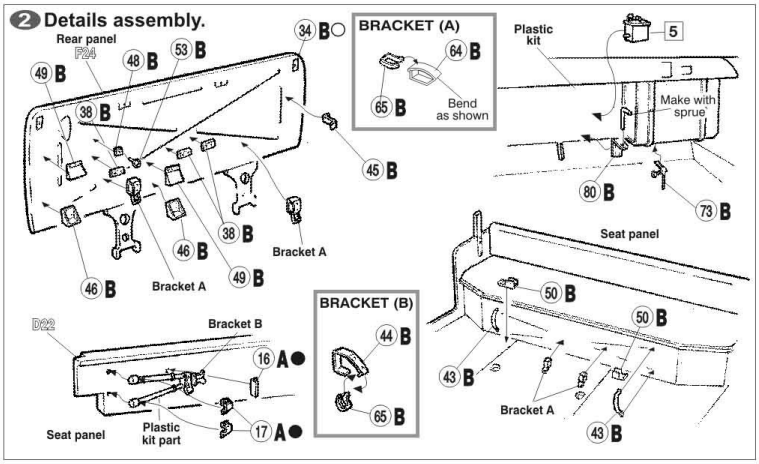


3 Details assembly.

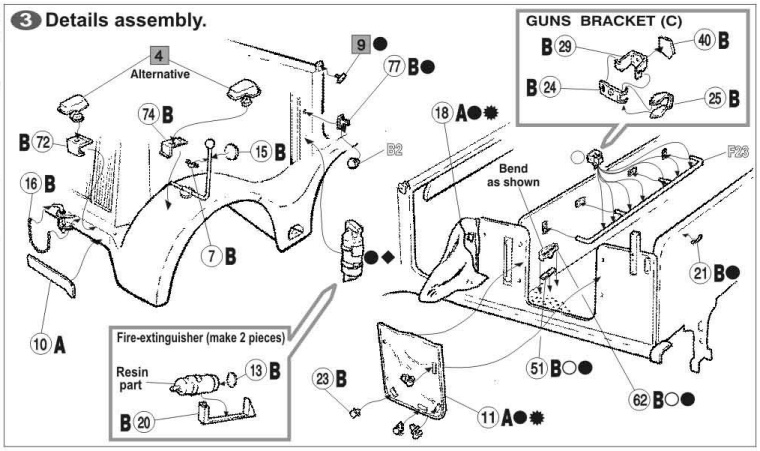


4 Windshield assembly.

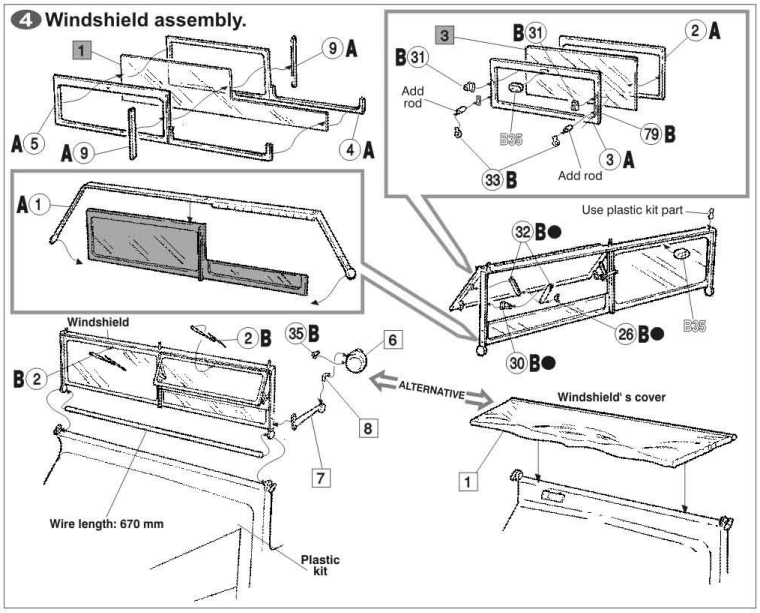

5 Flat bed assembly.

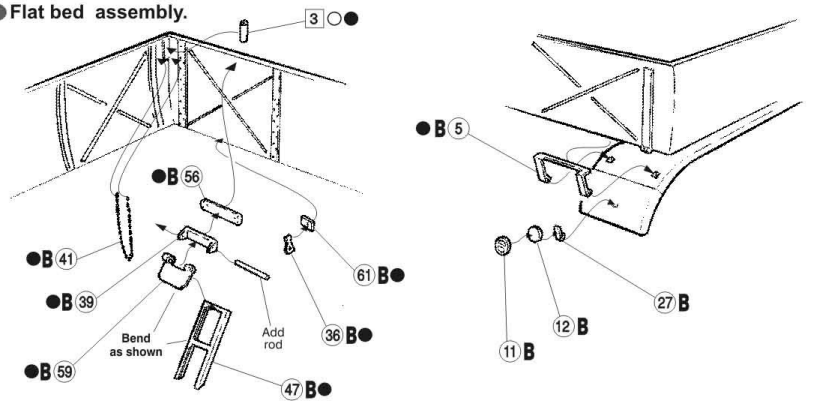


6 Flat bed assembly.

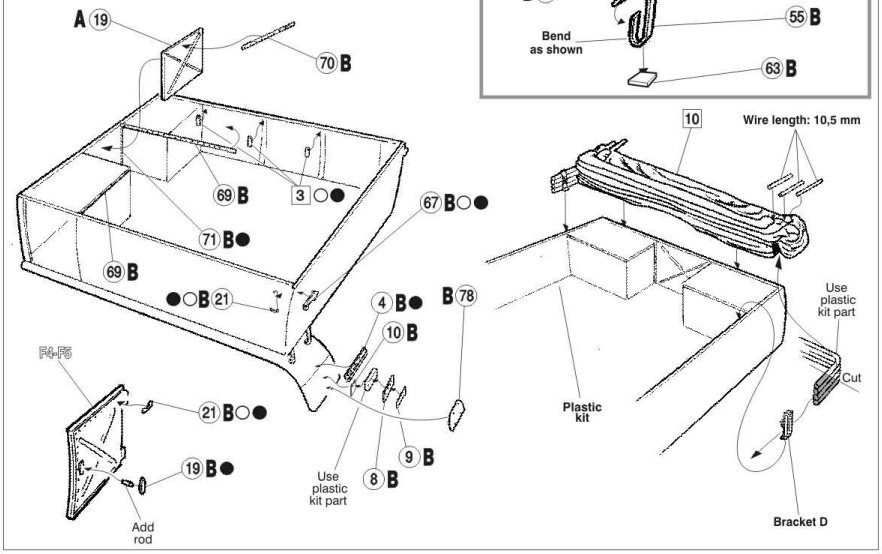

7 Wheels painting.

*Before painting the wheel frame colour the whole wheel black.


Hold template no. 1C still in position with finger tips and spray whell frame with paint of desidered colour as shown below.

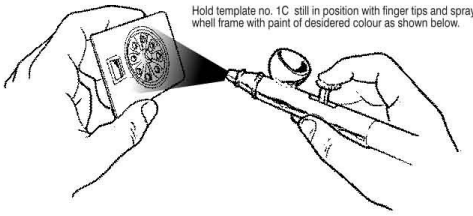

8 Track painting.

*Before painting the plastic kit part C1 colour the track with dark red brown colour.

Hold template no. 2C still in position with finger tips and spray track link (C1 part) with black colour as shown below

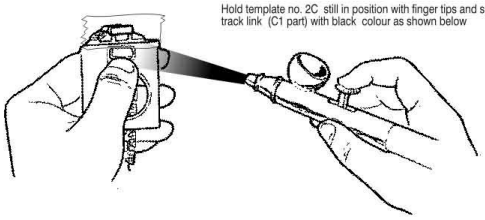

© (2000) ROYAL MODEL

Other SET available for your kit.



For see all range of our products, visit our web site.
www:royalmodel.com.