ROYAL MODEL
DIORAMA ACCESSORIES

ITEM NO. 427

MICRODETAILS SET
1/35 Scale


German (39H) 10.5cm-Geschutzwagen (part1)

The parts included in this kit are to be assembled in conjunction with the TRUMPETER kit No.00353. For best results in the assembling of photo-etched and resin parts use cyanoacrylate glue. Always remember to use cyanoacrylate glue in a well ventilated area. Before assembling be sure to remove all the parts to be substituted with photo-etched parts. It is advisable before assembling to study well the instructions which accompany this kit plus any other sufficient documentation.It is advise to heat the metal parts before glueing, once the metal is hot it will be easier to bend.


REPEAT SAME OPERATION FOR THE OTHER SIDE
R RESIN PART
ADD PLASTICARD STRUCTURE
X2 MAKE 2 PIECES
ADD ROD
REMOVE OR SUBSTITUTE THE PLASTIC KIT PART WITH ROYAL MODEL PART
TO FOLD
TO BEND
PK PLASTIC KIT PART
ADD NUT


If ulterior details are required for your model it is possible to use added set ROYAL MODEL no. 429.

1

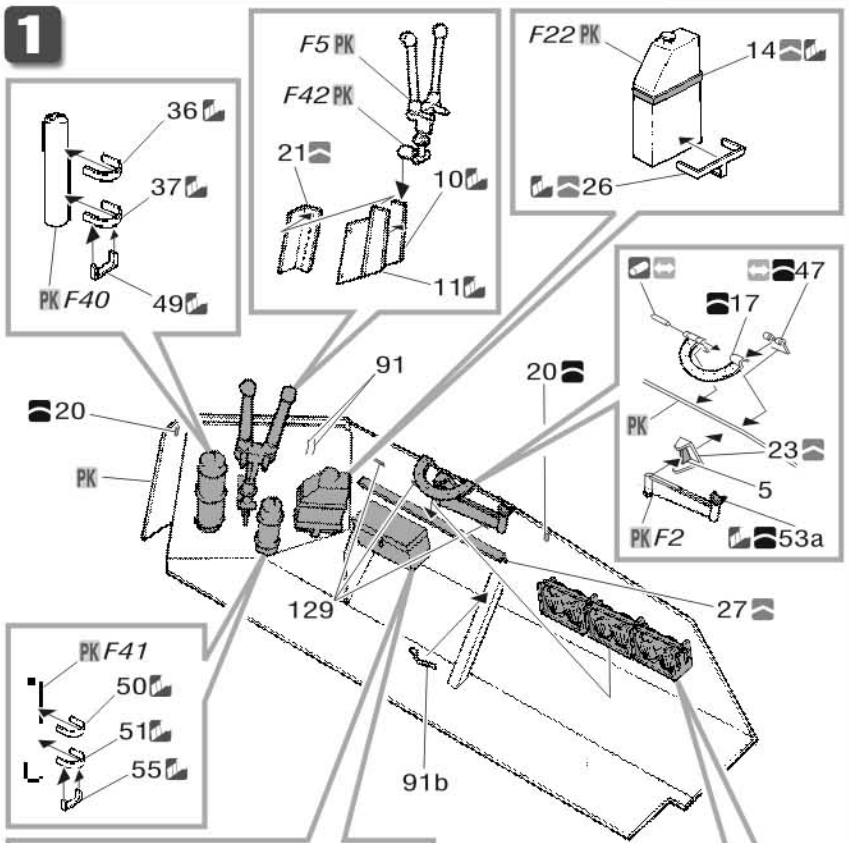


2

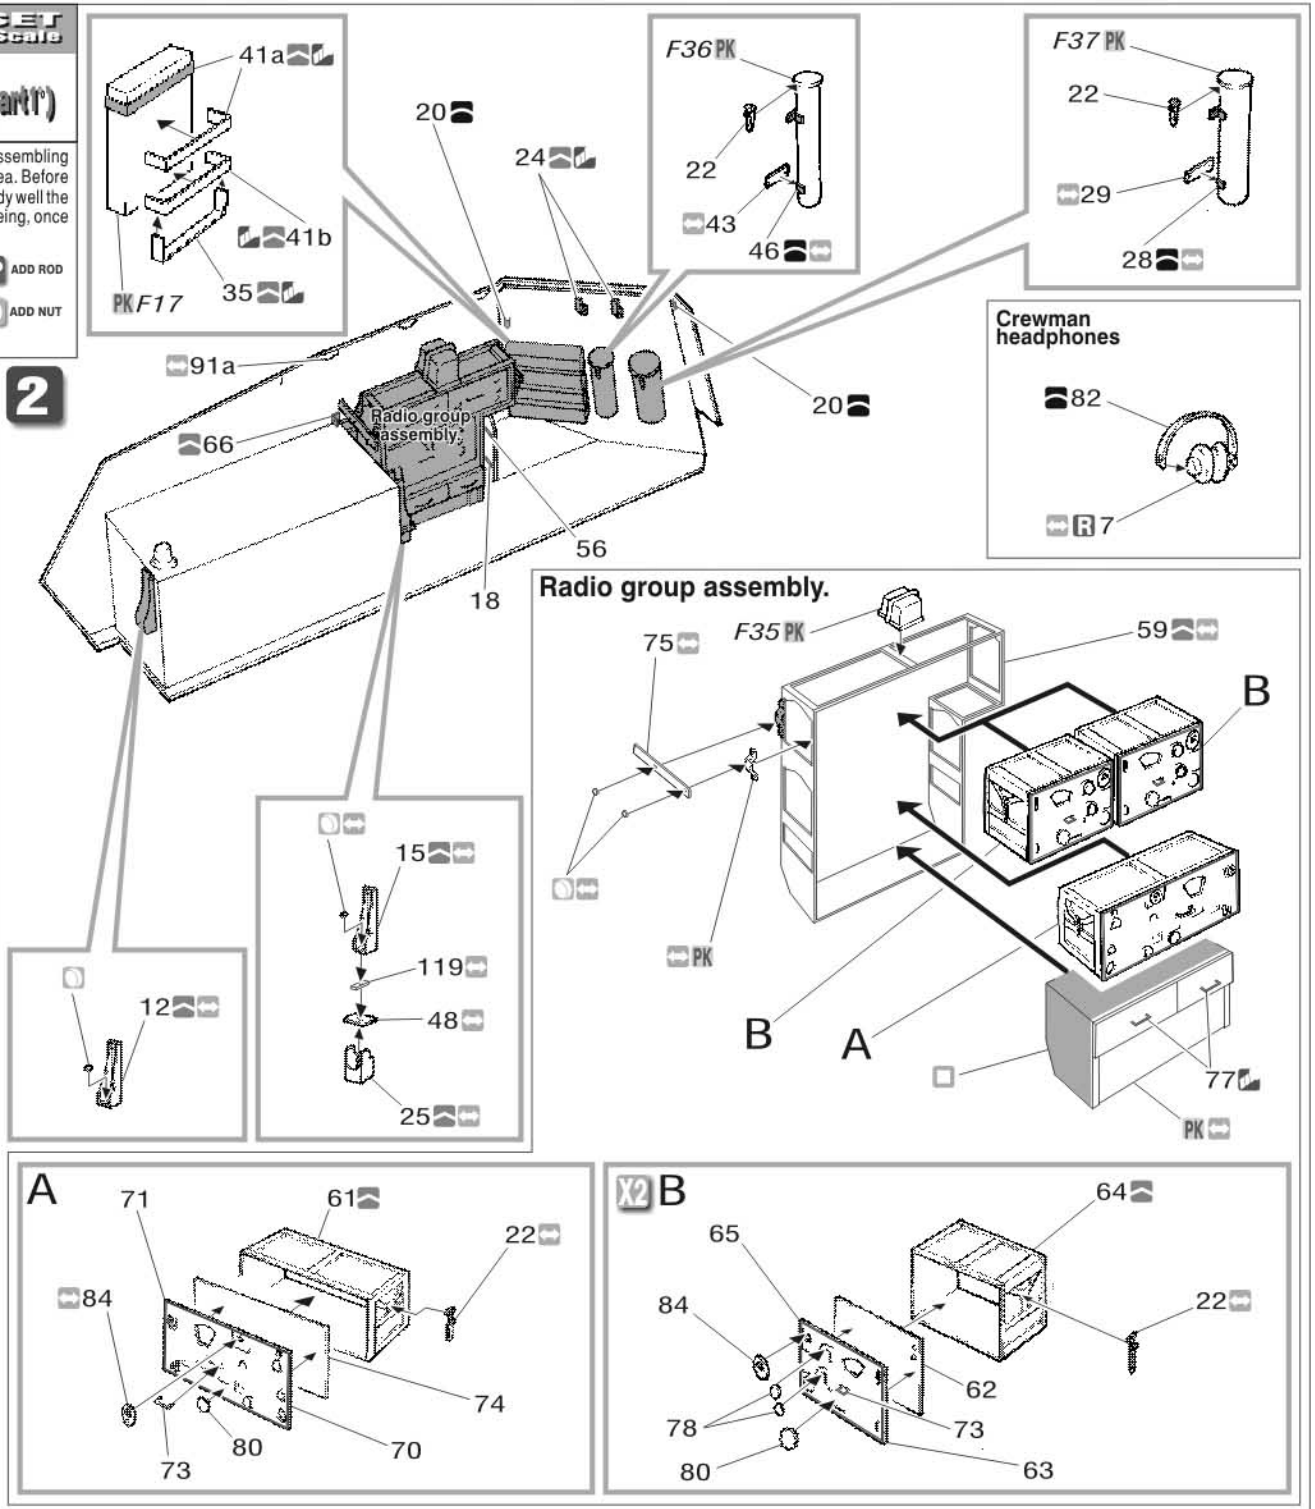

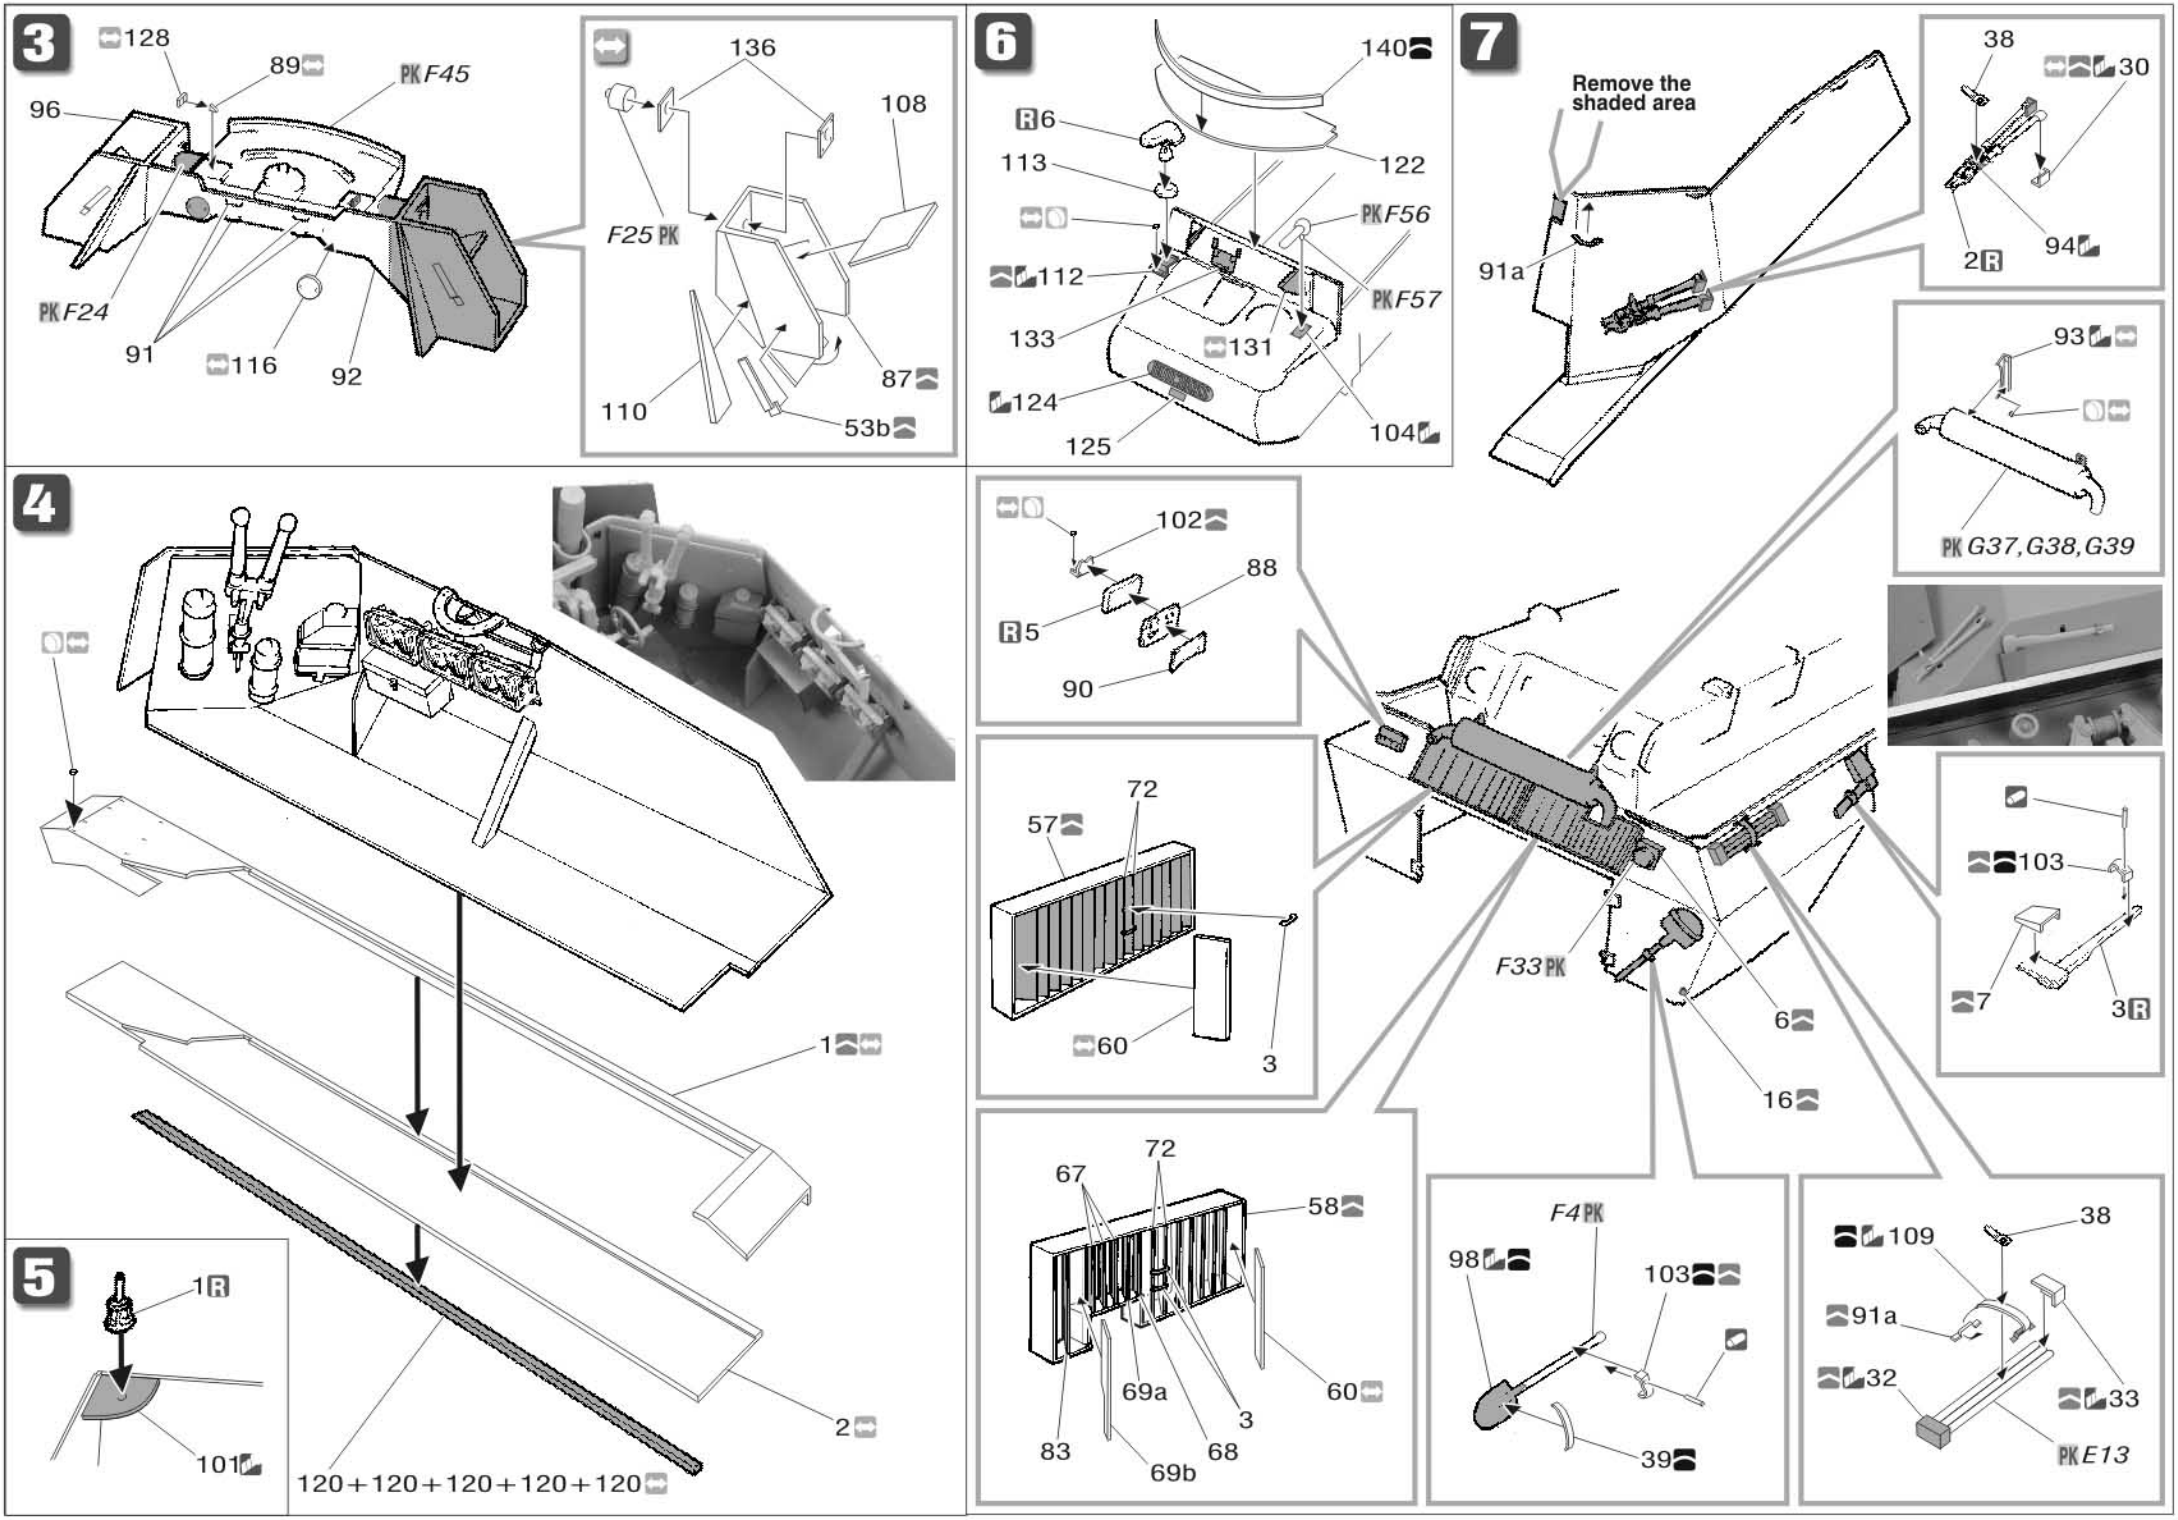

3
128
89
PK F45
96
PK F24
91
116
92
136
108
F25 PK
110
87
53b
6
140
R6
113
122
PK F56
112
PK F57
133
131
124
125
104
7
Remove the shaded area
91a
38
30
2R
94
93
PK G37, G38, G39
4
1
2
120+120+120+120+120
102
88
R5
90
72
57
60
3
F33 PK
6
16
103
7
3R
5
1R
101
72
67
58
69a
3
60
83
68
69b
F4 PK
98
103
39
109
38
91a
32
33
PK E13

8 For to make the nuts of parts no. 45,97,148,149,150,151,152,153,154, 155, to press into the references points with a puch as shown below.

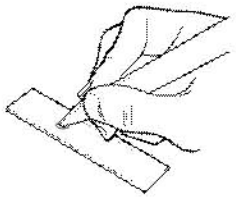


9


10

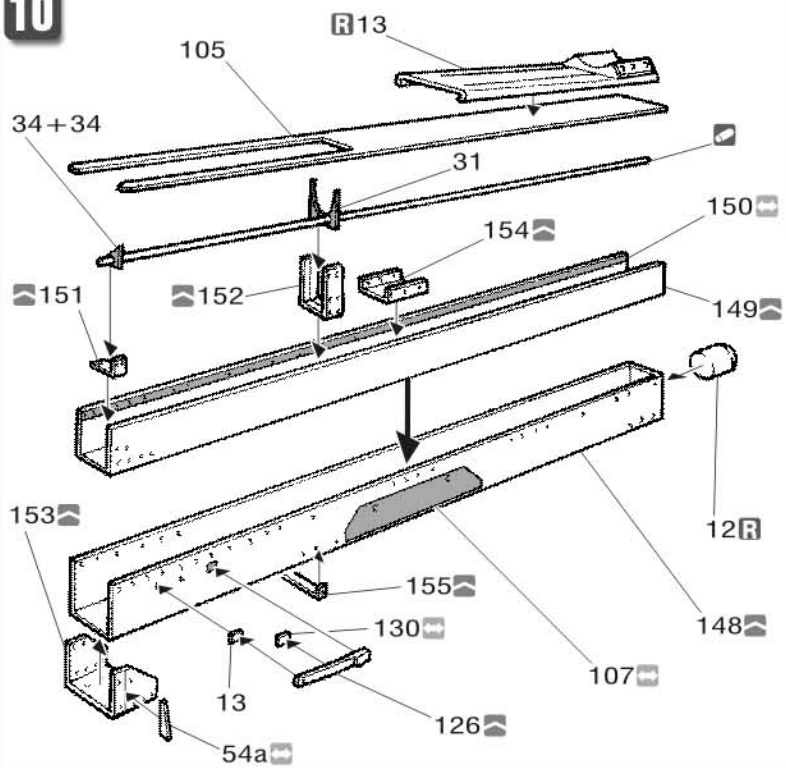


11

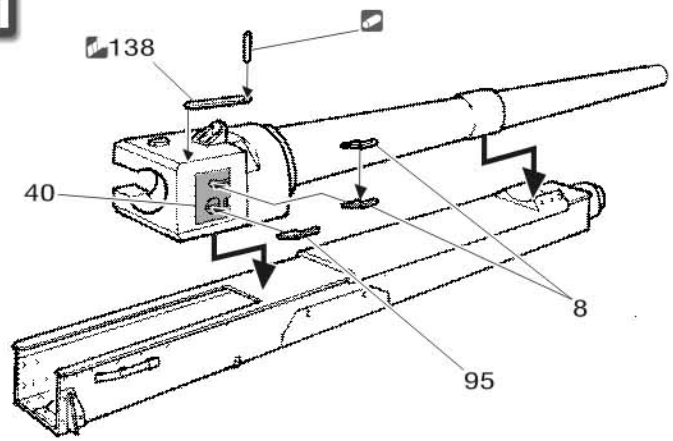


12

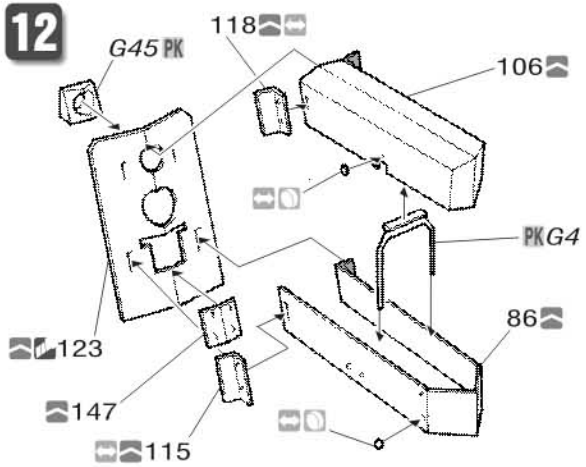


13

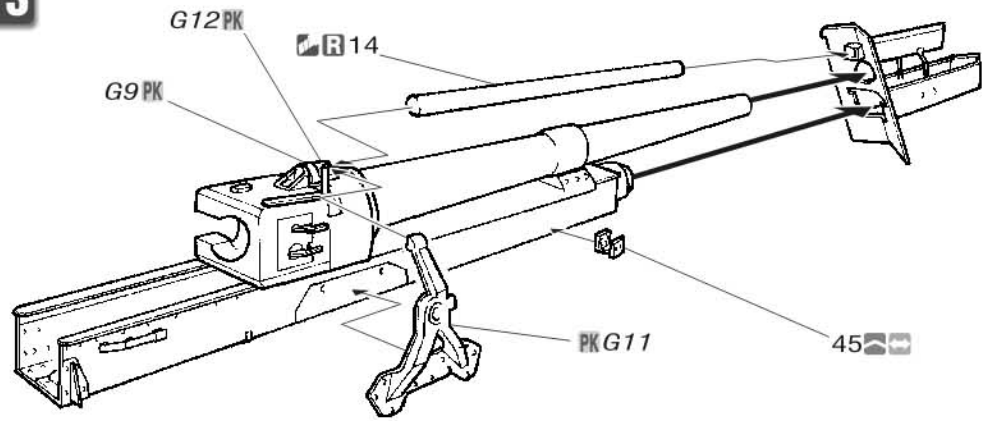


14

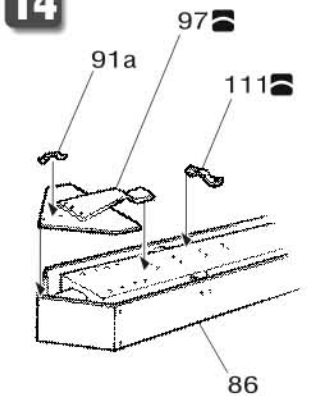

15

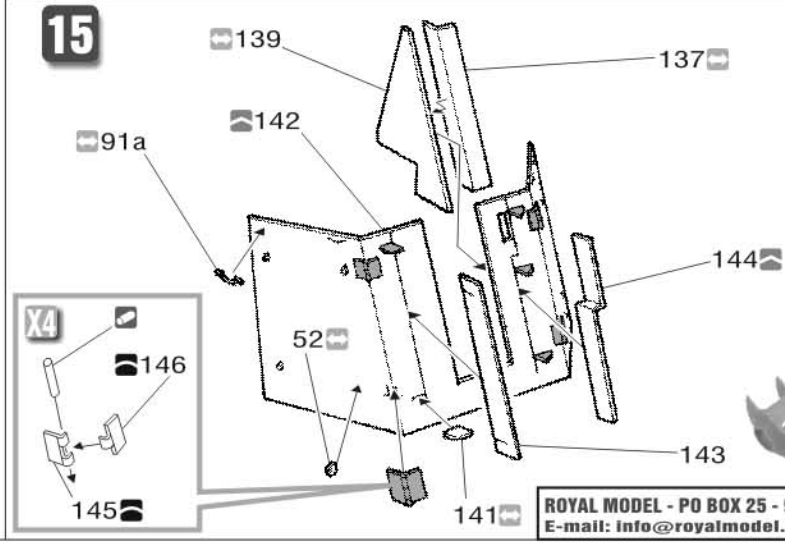

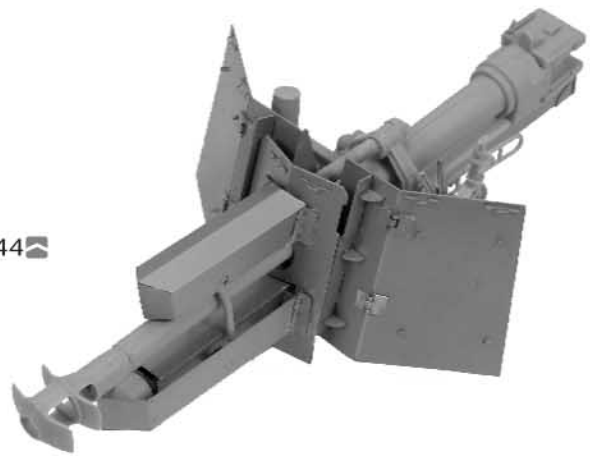

ROYAL MODEL - PO BOX 25 - 95039 TRECASTAGNI (CT) ITALY Tel. +39 95 780 0707-Fax +39 95 780 99 11
E-mail: info@royalmodel.com - Internet: www.royalmodel.com
©(2006) ROYAL MODEL