ROYAL MODEL
DIORAMA ACCESSORIES

ITEM NO. 475


MICRODETAILS SET
1/48 Scale

M4 SHERMAN EARLY PRODUCTION


The parts included in this kit are to be assembled in conjunction with the TAMIYA kit No.32505. For best results in the assembling of photo-etched and resin parts use cyanoacrylate glue. Always remember to use cyanoacrylate glue in a well ventilated area. Before assembling be sure to remove all the parts to be substituted with photo-etched parts. It is advisable before assembling to study well the instructions which accompany this kit plus any other sufficient documentation. It is advise to heat the metal parts before glueing, once the metal is hot it will be easier to bend.

BE CAREFUL
REPEAT SAME OPERATION FOR THE OTHER SIDE
THIS PART SUBSTITUTE THE PLASTIC PART N...
X2 MAKE 2 PIECES
ADD ROD
REMOVE OR SUBSTITUTE THE PLASTIC KIT PART WITH ROYAL MODEL PART
TO BE HEATED
FACULTATIVE
PK PLASTIC KIT PART
ADD NUT


1

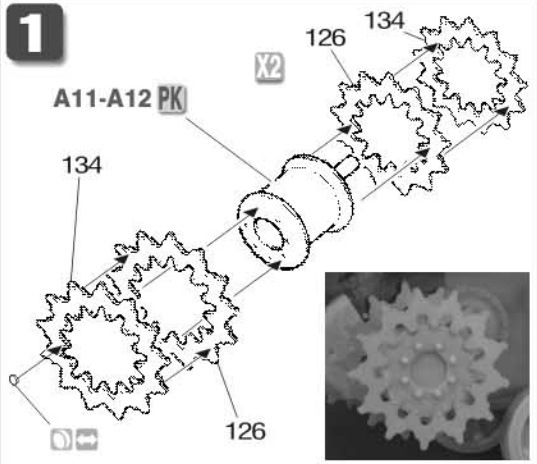

2

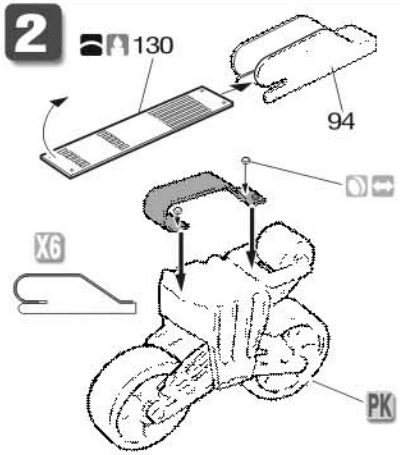



3

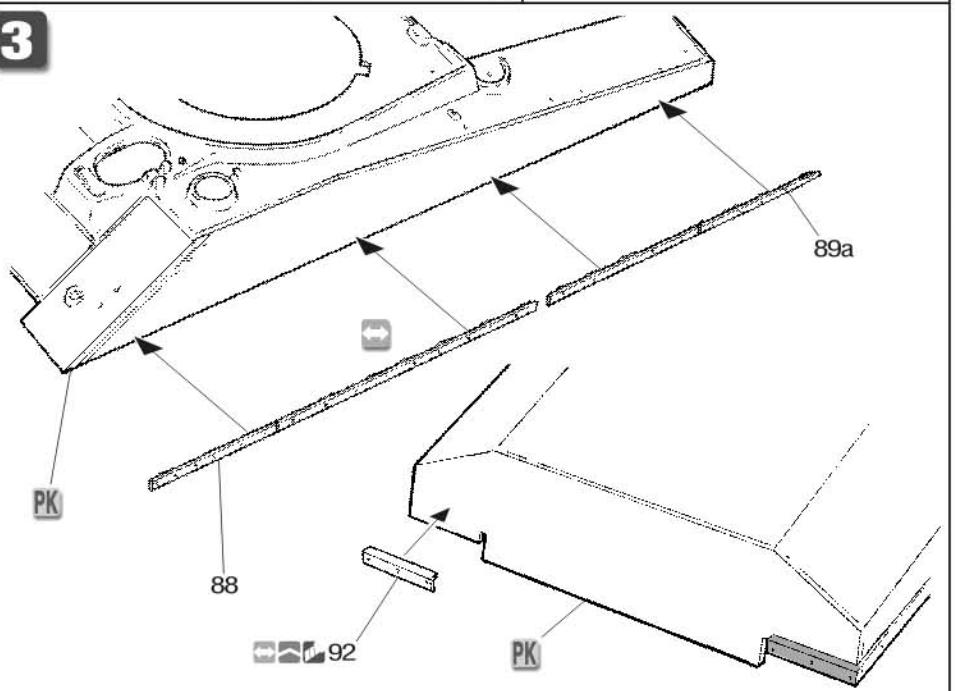


4


For to make the ribs and nuts, to press into the references points with a puch as shown below.

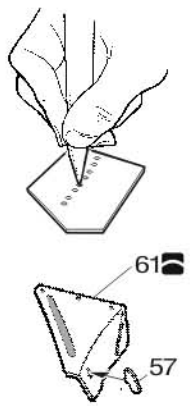

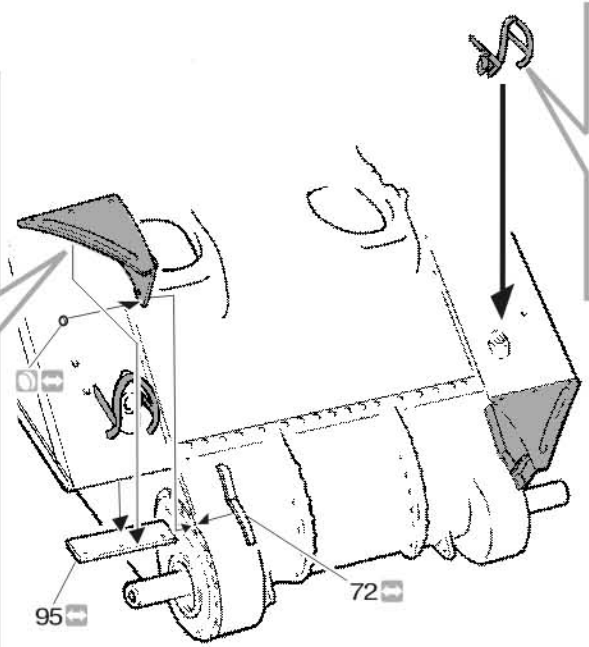


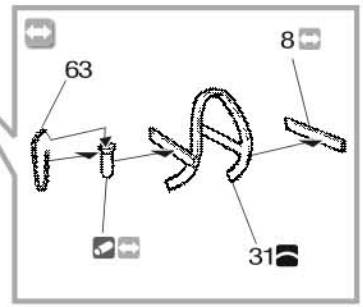



5

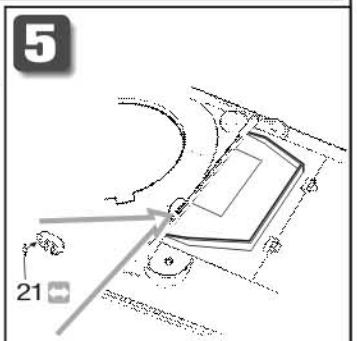



5

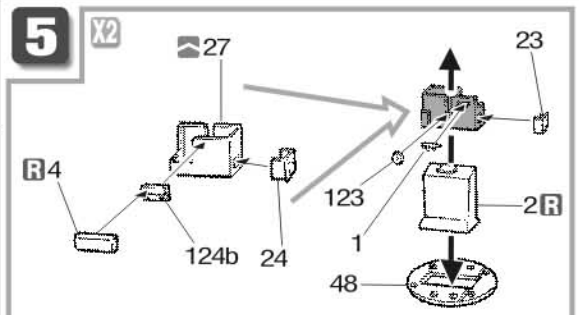


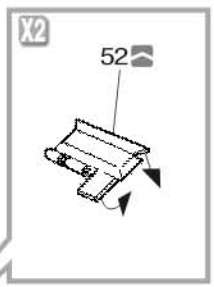


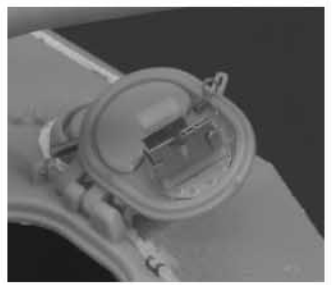

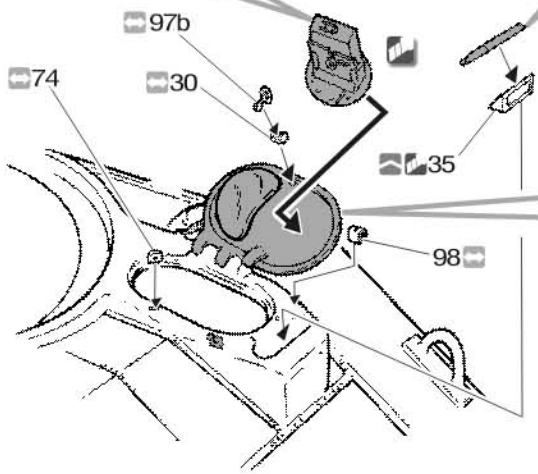

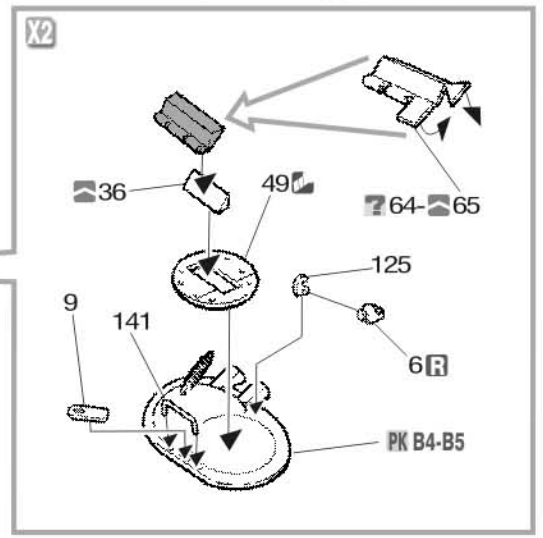

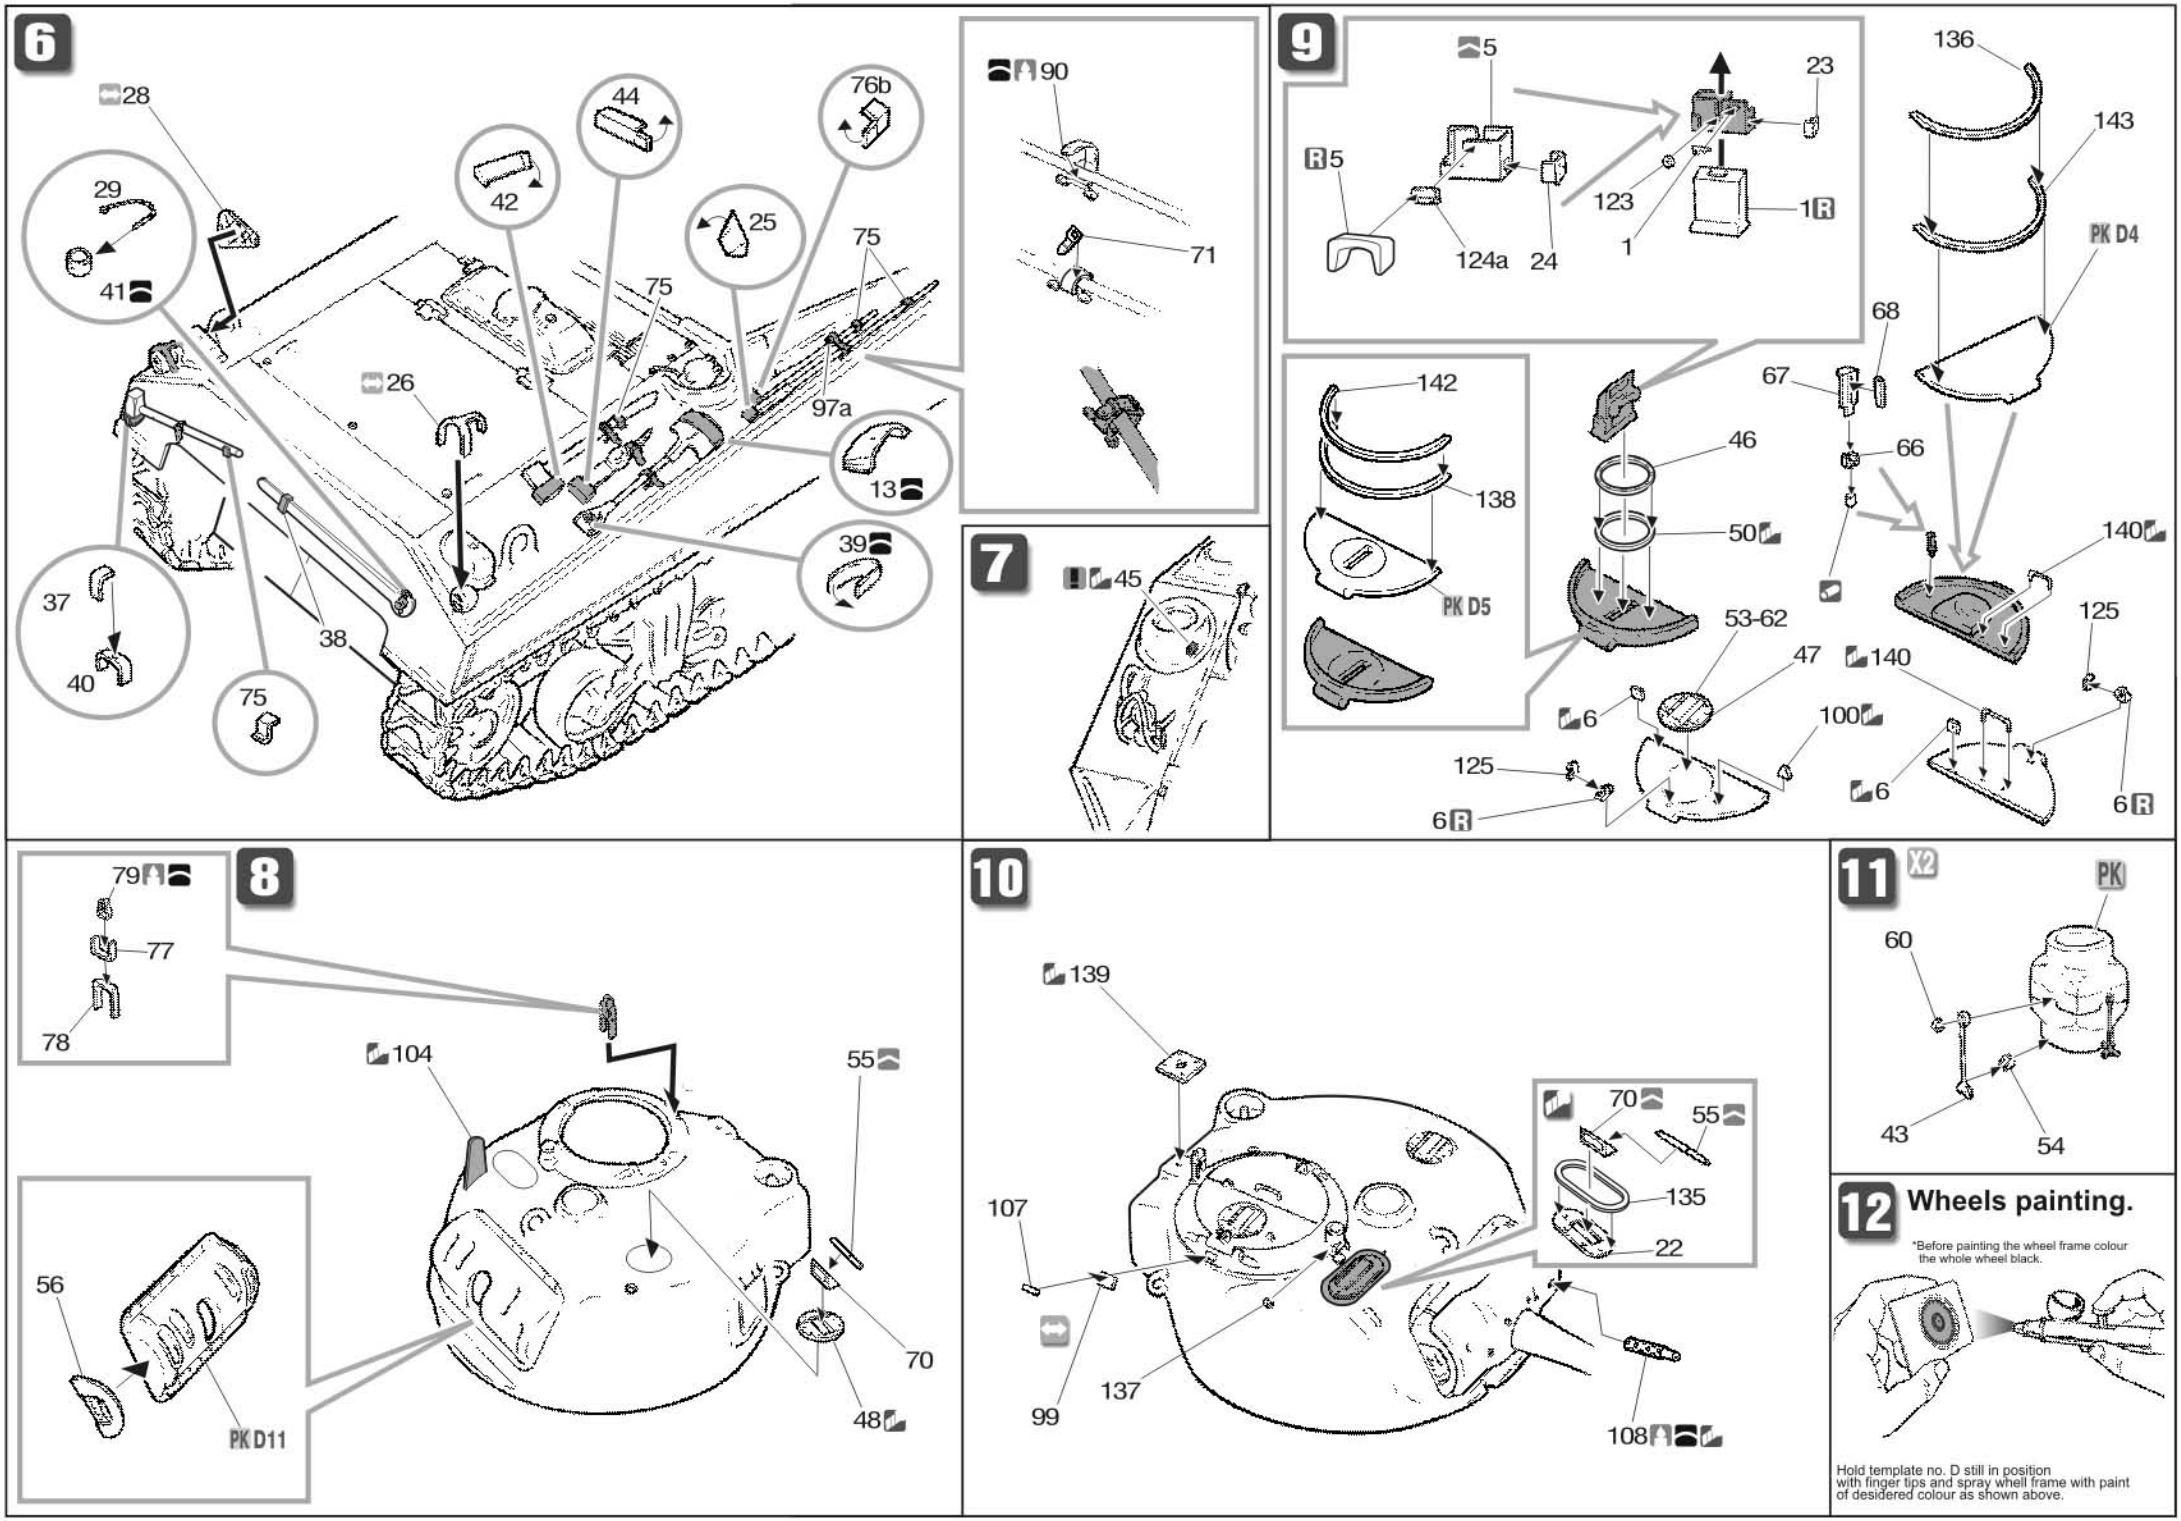
6
28
29
41
44
42
76b
25
75
75
26
97a
13
39
37
40
38
75
90
71
7
45
9
5
R5
124a
24
123
1
23
1R
136
143
PK D4
68
67
66
142
138
PK D5
46
50
53-62
47
140
125
6
100
125
6R
140
6
6R
8
79
77
78
104
55
56
PK D11
70
48
10
139
107
99
137
70
55
135
22
108
11
X2
PK
60
43
54
12
Wheels painting.
*Before painting the wheel frame colour the whole wheel black.
Hold template no. D still in position with finger tips and spray whell frame with paint of desidered colour as shown above.

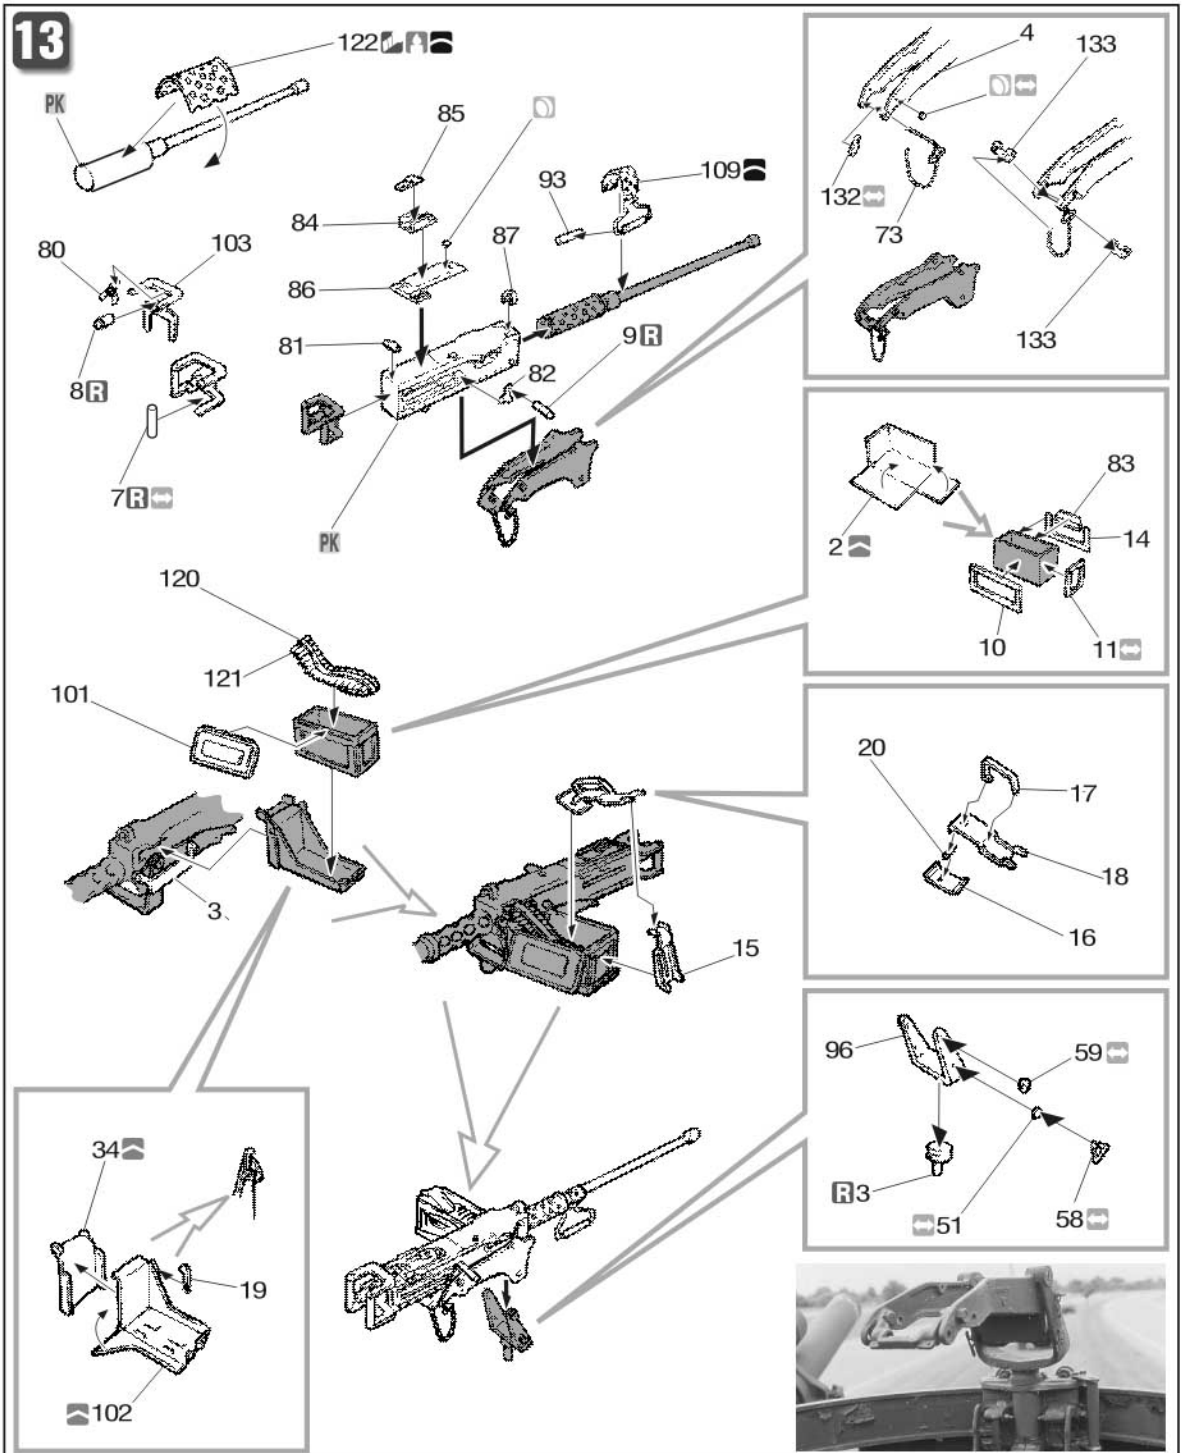

ROYAL MODEL - PO BOX 25 - 95039 TRECASTAGNI (CT) ITALY Tel. +39 95 780 0707-Fax +39 95 780 99 11
E-mail: info@royalmodel.com - Internet: www.royalmodel.com
©(2006) ROYAL MODEL