ROYAL MODEL ®
DIORAMA ACCESSORIES
Royal Model by Reale Roberto
P.O.Box 25 - 95039 - Trecastagni (CT) ITALY

Mudguards set Panzer III

MICRODETAILS SET
No. 168
1/35 Scale




The parts included in this kit are to be assembled in conjunction with the Tamiya kit no. 35215 or Dragon kit. For best results in the assembling of photo-etched and resin parts usecyanoacrylate glue.Always remember to use cyanoacrylate glue in a well ventilated area. Before assembly be sure to remove all parts to be substituted with photo-etched and resin parts.It is advised before assembly to study well the instructions which accompany this MICRODETAILS SET plus any other sufficient documentation.Note that some particulars illustrated in the instructions have been enlarged for easy identification.
If ulterior details are required for your models it is possible to use added sets ROYAL MODEL no.167-176.

○ Substitute the plastic part with the photo-etched or resin part.
● Repeat same operation for the other side.
00 Resin part
(00) Photo-etched part


1 Lateral mudguards details assembly.

Before starting to assemble this set, eliminate the original mudguards from the kit and proceed as follows.
(Repeat same operation for the other side.)

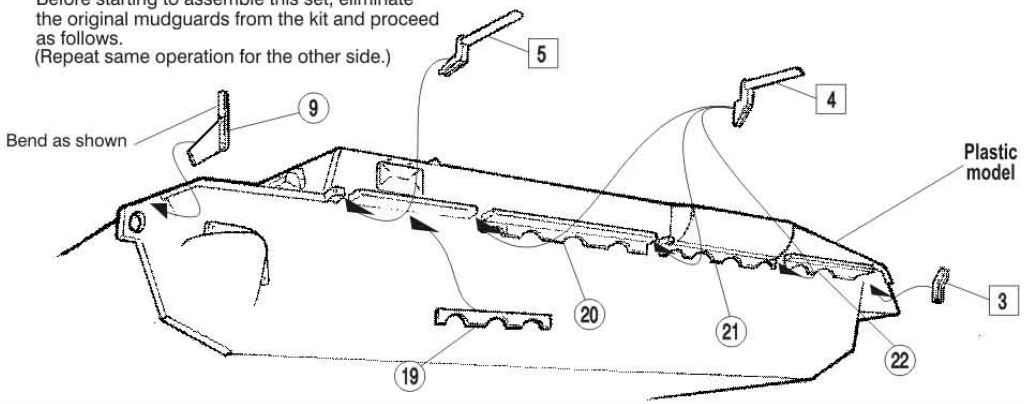


2 Lateral mudguards details assembly.

(Repeat same operation for the other side.)

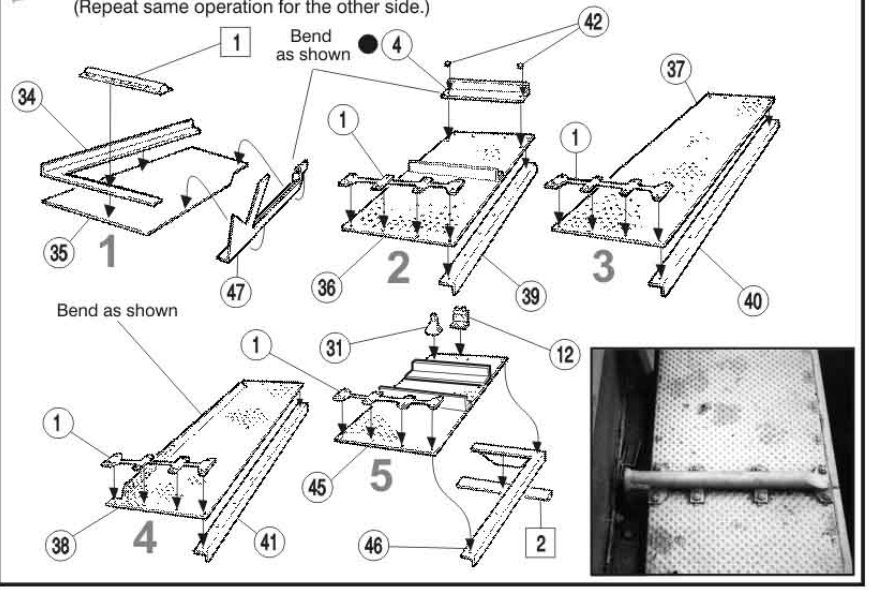


3 Lateral mudguards assembly.

Follow the reference numbers as in preceeding illustration.
(Repeat same operation for the other side.)

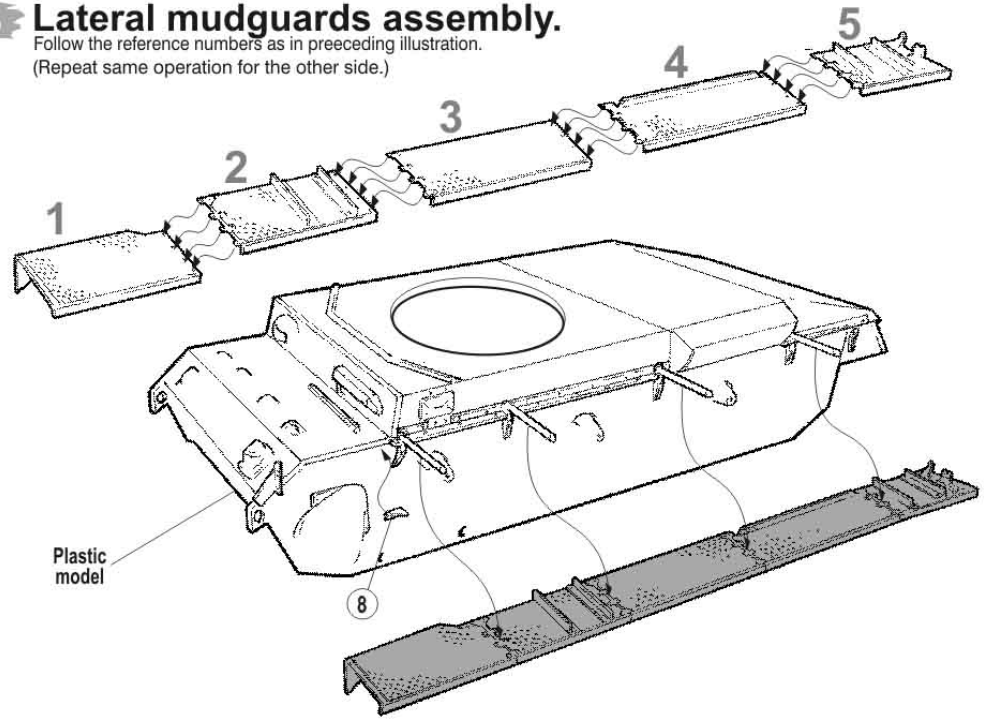

4 Front mudguards details assembly.


(Repeat same operation for the other side.)

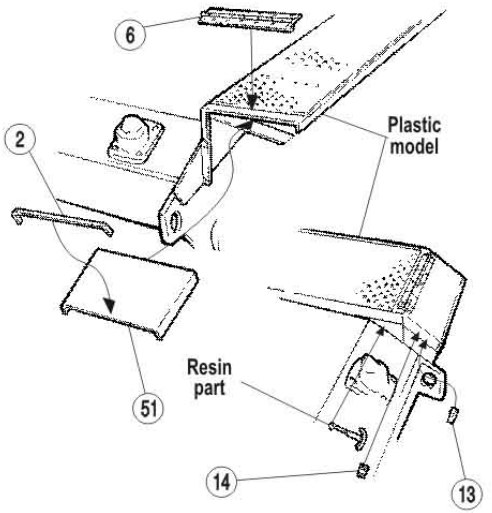



5 Rear mudguards details assembly.

(Repeat same operation for the other side.)



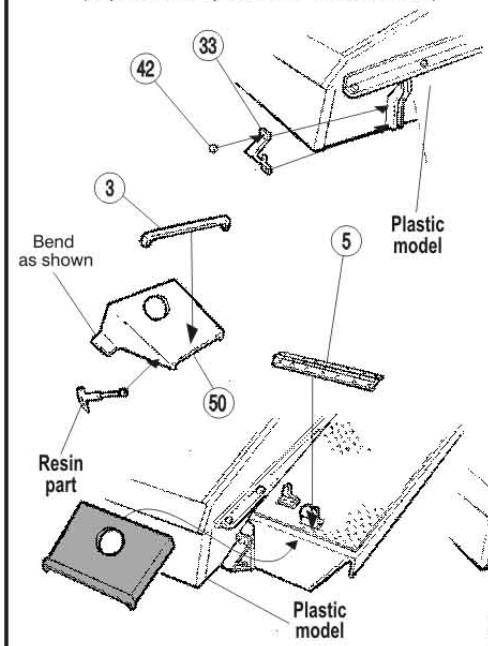

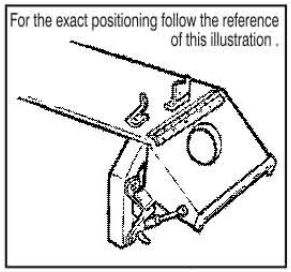

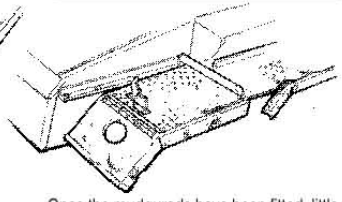

Once the mudgurads have been fitted, little dents can be made to give a more realistic appearance, as illustrated in the design above.

ⓒ (1998) ROYAL MODEL